


Installation Instructions

(Translation of the original installation instructions)

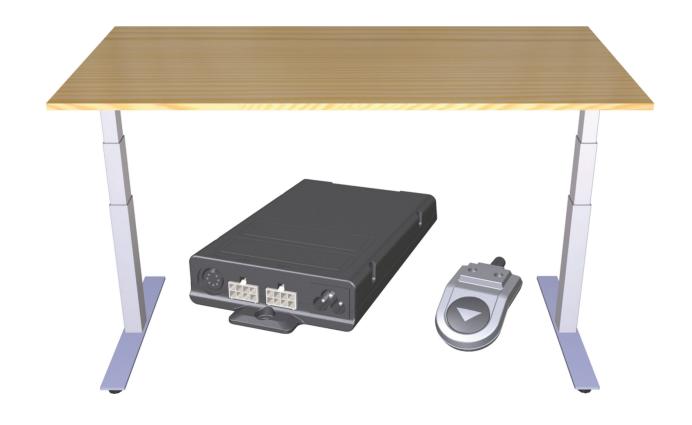

DD11S system DD21S system

Document revision history

Version	Date	Modification, change
1.0	10/2016	First release
2.0	11/2019	Control unit SMARTneo (pro)
		Complete system with three lifting columns

Disclaimer and exclusion of liability

DewertOkin is not responsible for damage resulting from:

- failure to observe these instructions,
- changes made to this product which have not been approved by DewertOkin, or
- the use of replacement parts which have not been approved or manufactured by DewertOkin.
- ▶ We reserve the right to make unannounced technical changes in the course of our continual product improvement process!

Creation of a complete operating instruction manual for the entire end product

These instructions are only intended to be used by the end-product manufacturer. They should not be given to the operator of the end product. The factual information contained within may be used as a basis when creating the end-product manual.

The warning and danger notices are best suited for use in the end product's manual. However, it is not sufficient to simply follow these notices. You should also carry out an internal risk assessment for your end product. This can then be used as the basis for the safety notices in your manual.

These installation instructions do not contain all information required to safely operate the end product. They only describe the installation and operation of the drive as partially completed machinery.

The instructions are intended for the technicians responsible for manufacturing an end product and not for the operators of the end product.

Docu	ument revision history	3
Disc	laimer and exclusion of liability	3
Crea	tion of a complete operating instruction manual for the entire end product	3
1.	General Information	7
1.1	About these installation instructions	7
1.2	Safety notices within the installation instruction and the operating instructions for the entire machine	8
1.3	Conventions used	8
2.	Safety notices	9
2.1	Proper and intended usage	9
2.2	Selection and qualification of personnel	10
3.	System component description	
3.1	Complete installed system	11
3.2	Complete installed system	13
3.3	SMART and COMPACT control units	15
3.4	Control keypads	17
3.5	Lifting columns	25
4.	System configurations	27
5.	Installation	30
5.1	Safety notices to observe during installation	30
5.2	Installing the DD11S and DD21S lifting columns	32
5.3	Installing the control keypads	40
5.4	Installing the SMART/COMPACT control units	46
5.5	Electrical connections for the SMART/COMPACT control units	50
5.6	Mounting the sensor unit	53
5.7	Mains power supply for the SMART/COMPACT control units	60
6.	Initial commissioning	
6.1	Reset during initial commissioning and after the removal of connecting cables	62
7.	Notes for operation	63
7.1	General information	63

8.	Operating the control keypads	65
8.1	Functions of the Motion Assist control keypad	65
8.2	Functions of the HSCO control keypad	66
8.3	Functions of the HSU Varioline control keypad	67
8.4	Functions of the HSU control keypad	68
8.5	Functions of the HSF control keypad	70
8.6	Functions of the TOUCHbasic-inlay keypad	73
8.7	Functions of the TOUCHbasic-down keypad	74
8.8	Functions of the TOUCHfx keypad	75
8.9	Functions of the TOUCHdown keypad	77
8.10	Functionality of the TOUCHinlay keypad	79
9.	Troubleshooting	81
9.1	Malfunctions	81
9.2	Error messages on the control keypad's display	82
9.3	Error messages, as indicated by clicking tones from the control unit	85
9.4	Error messages displayed by the LEDs (COMPACT control unit)	85
10.	Maintenance and cleaning	86
10.1	Maintenance	86
10.2	Cleaning	86
11.	Technical specifications and product designation	
11.1	Table	_
11.2	SMART and COMPACT control units	
11.3	Dimensions of the SMARTeco control unit	90
11.4	Dimensions of the SMARTneo / SMARTneo-pro control unit	91
11.5	Size of COMPACT control unit	92
11.6	DD11S lifting column	93
11.7	Dimensions of the DD11S lifting column	94
11.8	DD21S lifting column	95
11.9	Dimensions of DD21S lifting column	96
11.10	Product labelling	97
12.	Disposal	
12.1	Packaging material	104
12.2	Drive components	104

Declaration of incorporation/installation	.105
EU Declaration of Conformity	.106

DD11S / DD21S General Information

1. General Information

1.1 About these installation instructions

These installation instructions are not specific operating instructions for the end product. Rather, they describe the functions of the control keypads and the installation of the DD11S/DD21S system components:

- DD11S lifting columns
- DD21S lifting columns
- DESKFRAME C DDS-A 30x30 (non-adjustable version)
- DESKFRAME C DDS-A 40x40 (non-adjustable version)
- DESKFRAME C DDS-B 30x30 (adjustable version)
- DESKFRAME C DDS-B 40x40 (adjustable version)
- · Control keypads
- SMART and COMPACT control units

These instructions will help you to minimize danger, repair costs and down times. They will also help you to maximize the reliability and lifespan of the end product.

NOTICE

Please also refer to the installation instructions (leaflet) supplied with each DD11S/DD21S system.



L CAUTION

The notices in these instructions must be followed! Following the guidelines during installation and connection procedures will help to minimize:

- · the risk of accident and injury, and
- · damage to the drive system or the end product.

These installation instructions have been written with due care and attention. However, we cannot guarantee that the data, images and drawings are complete and correct nor do we accept any liability for the information contained therein, unless required by law.

▶ We reserve the right to make unannounced technical changes in the course of our continual product improvement process!

Availability of this document

As manufacturer of the end product, you are obligated to comply with Machinery Directive 2006/42/EC. This directive stipulates that the installation instructions must be kept on file for governmental inspection purposes.

Keep these instructions in a safe place!

Application

These testing principles apply towards the testing and certification of sitting/standing desks used for office, meeting, conference and training rooms. The work tables can be adjusted and used for both sitting and standing work conditions.

General Information DD11S / DD21S

1.2 Safety notices within the installation instruction and the operating instructions for the entire machine

The manufacturer of the complete machine (the end product) is only permitted to operate the DD11S/DD21S lifting columns (by itself an incomplete machine)

- when the end product (for which the DD11S/DD21S lifting columns are intended) is in compliance with all protective measures specified in the Machinery Directive 2006/42/EC, and
- when the manufacturer expressly declares the compliance of the end product.

The manufacturer of the end product must create a manual for the users of that product. The safety notices in the end-product manual must be written based on the end product's risk assessment.

1.3 Conventions used

Notices which do not relate to safety are indicated in these instructions with a symbol:

► Triangular notice symbol

Explanations of warning notices



CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices which are not related to personal injury but may result in damage to the product or surroundings.

DD11S / DD21S Safety notices

2. Safety notices

2.1 Proper and intended usage

The DD11S/DD21S system is intended for adjusting the height of tables using the SMART/COMPACT control units and the DewertOkin DD11S/DD21S lifting columns.

It may only be used for applications where unintended motion cannot lead to damage.

It may only be used in dry rooms.

DESKFRAME C DDS-A 30x30, DESKFRAME C DDS-A 40x40 DESKFRAME C DDS-B 30x30, DESKFRAME C DDS-B 40x40

This height-adjustable table (without tabletop*) for office work:

- is designed for working while sitting,
- · sitting and standing or
- only standing
- when a tabletop is already present.* (DD11S system, type D, EN527-1

DD21S system, type A, EN527-1)

^{*} The tabletop will be provided and installed by the manufacturer of the end product.



L CAUTION

Risk of accident

The DD11S/DD21S system should only be used for the purposes described above. Any other use is forbidden. Improper usage can lead to accidents or destruction of the unit. Such non-approved applications will lead immediately to the expiration of all guarantee and warranty claims on the part of the end-product manufacturer against the manufacturer.

Improper usage

Be sure to follow the notices below concerning improper usage. You should include them in your product manual in order to inform the users of your end product.

The DD11S/DD21S system should not be used:

- · with a medical product, or installed in a medical product,
- · as a power source for toys or games,
- in a moist environment, or
- outdoors.

NOTICE

When installing and operating the lifting column, please note the following:

- · Handle the lifting column with care!
- Do not drop the lifting column vertically to the ground.
- Do not tilt the lifting column sideways and let it fall to the ground.
- Do not subject the lifting column to lateral shock loads during the installation.

Safety notices **DD11S / DD21S**

The DD11S/DD21S system can be used by children of 8 years and older, persons with reduced physical, sensory or mental capabilities, or persons with lack of experience or knowledge when they are supervised or instructed concerning the safe use of the device and when they understand the resulting risks. Do not allow children to play with this device. The cleaning and user maintenance must not be carried out by children without supervision.

► You should only use spare parts which have been manufactured or approved by DewertOkin. Only these parts will guarantee a sufficient level of safety.



A CAUTION

Danger of pinching/crushing injuries!

There is a danger of being crushed when the table position is changed. This is particularly true when there is no protective mechanism guarding against crushing injuries. However, crushing injuries may even occur in exceptional cases when a safety guard is installed. Make sure that there are no persons within the danger zone and that nobody reaches into the danger zone. This also applies in the following situations:

- In the event of a malfunction, the table may move a bit during an adjustment before the safety shutdown mechanism triggers. This could result in a crushing injury.
- The impact protection mechanism is not active during resets and end-position queries. This could result in a crushing injury.

2.2 Selection and qualification of personnel

The installation of the drive in the end product may only be performed by qualified personnel. You should only install this drive when you are qualified to do so. Otherwise, a properly qualified person should be found for this task.

3. System component description

The DD11S/DD21S system uses lifting columns to adjust the height of tables. A table-mounted control keypad and the SMART/COMPACT control units can be used for the adjustments.

The versions of the DD11S/DD21S systems differ by:

- · the type of control keypads,
- the number of lifting columns that can be connected,
- the design of the lifting columns that can be connected,
 - DD11S: single telescopic
 - DD21S: double telescopic
- the type and number of control units connected.

3.1 Complete installed system

DESKFRAME C DDS-A 30x30 / DESKFRAME C DDS-A 40x40 DESKFRAME C DDS-B 30x30 / DESKFRAME C DDS-B 40x40

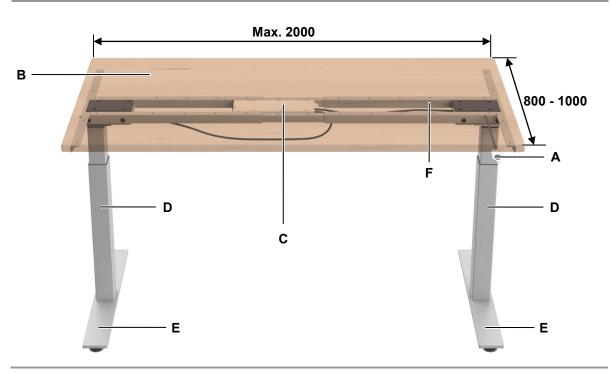


Figure 1Example: DD11S system with two DD11S lifting columns

A Control keypad

C SMART or COMPACT control units

E Table base

B Tabletop

D DD11S lifting column (single telescopic)

F Deskframe

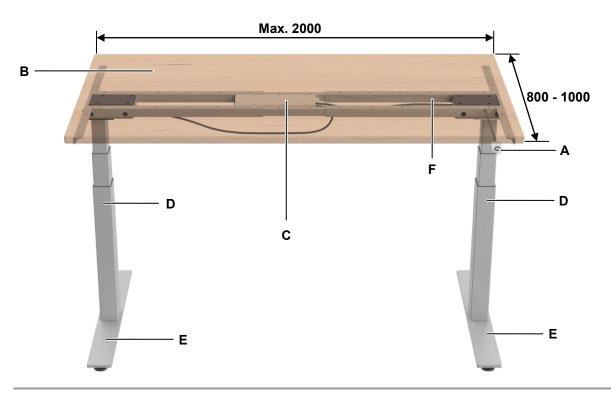


Figure 2Example: DD21S system with two DD21S lifting columns

A Control keypad

C SMART or COMPACT control units

E Table base

B Tabletop

D DD21S lifting column (double telescopic)

F Deskframe

3.1.1 Dimensions

Specifications for the installed system:

• Max. lengthwise extension: 1200 – 2000 mm

• Max. transverse extension: 800 – 1000 mm

• The max. permissible tabletop size is 2000 x 1000 mm.

• Max. load for the frame: 100 kg (including tabletop)

• Lifespan: max. 10,000 cycles (with load)

3.2 Complete installed system

DESKFRAME C DDS- $(A/B)^{1)}$ 30x30 + DESKFRAME C DDS- $(A/B)^{1)}$ 30x30-3L DESKFRAME C DDS- $(A/B)^{1)}$ 40x40 + DESKFRAME C DDS- $(A/B)^{1)}$ 40x40-3L

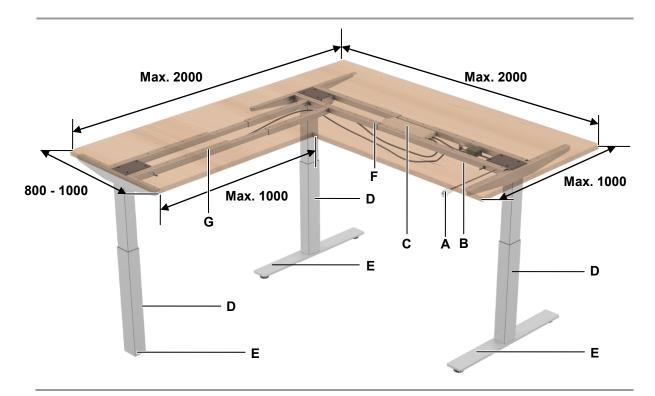


Figure 3Example: DD11S system with three DD11S lifting columns

- A Control keypad
- **C** COMPACT control unit
- E Table base

- **B** Tabletop
- **D** DD11S lifting column (single telescopic)
- F Cross bar for two lifting columns:

 DESKFRAME C DDS-(A/B)¹⁾ 30x30

 DESKFRAME C DDS-(A/B)¹⁾ 40x40
- **G** Cross bar (extension with one lifting column): DESKFRAME C DDS-(A/B)¹⁾ 30x30-3L DESKFRAME C DDS-(A/B)¹⁾ 40x40-3L

 $^{^{1)}}A = fixed$

²⁾B = adjustable

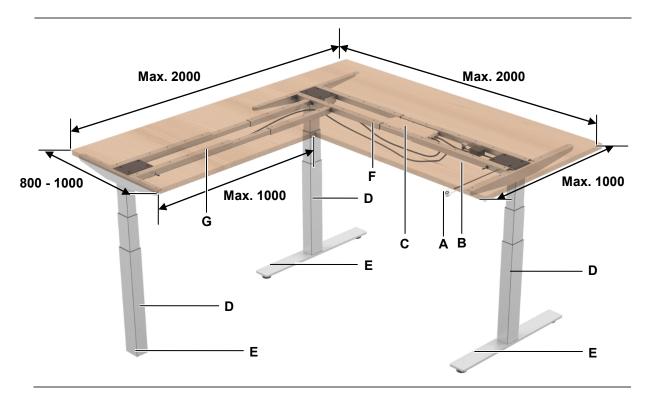


Figure 4Example: DD21S system with three DD21S lifting columns

- A Control keypad
- **C** COMPACT control unit
- E Table base

- **B** Tabletop
- **D** DD21S lifting column (double telescopic)
- F Cross bar for two lifting columns:

 DESKFRAME C DDS-(A/B)¹⁾ 30x30

 DESKFRAME C DDS-(A/B)¹⁾ 40x40
- **G** Cross bar (extension with one lifting column): DESKFRAME C DDS-(A/B)¹⁾ 30x30-3L

DESKFRAME C DDS-(A/B)¹⁾ 40x40-3L

3.2.1 Dimensions

Specifications for the installed system:

- Max. lengthwise extension: 1200 2000 mm
- Max. transverse extension: 800 1000 mm
- The max. permissible tabletop size is (1000-2000) x (800-1000) x (1600-2000) mm.
- Max. load for the frame: 120 kg (including tabletop)
- Lifespan: max. 10,000 cycles (with load)

 $^{^{1)}}$ A = fixed

²⁾B = adjustable

3.3 SMART and COMPACT control units

The SMART and COMPACT control units have an enclosure with connections for the power supply, lifting columns, and for the control keypad.

3.3.1 Control unit SMARTeco

The SMARTeco control unit is used for adjusting one or two lifting columns.

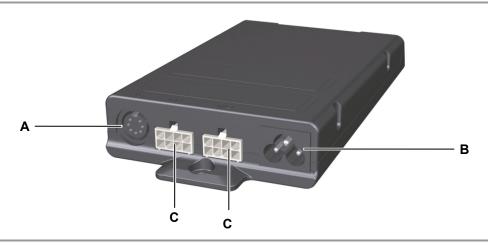


Figure 5SMARTeco control unit

- A Connection for the control keypad
- C Connection for the lifting columns
- **B** Mains power supply connection

3.3.2 SMARTneo / SMARTneo-pro control unit

The SMARTneo and SMARTneo-pro control units are used to adjust one or two lifting columns.

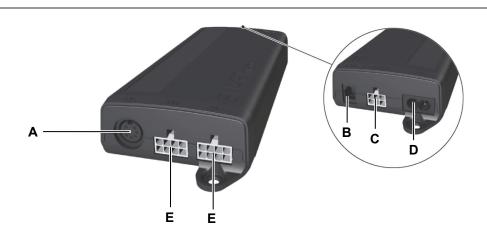


Figure 6SMARTneo / SMARTneo-pro control unit

- A Connection for the control keypad
- C Cascading connection
- **E** Connection for the lifting columns
- **B** Sensor connection (only for SMART-neo-pro)
- **D** Mains power supply connection

3.3.3 COMPACT control unit

The COMPACT control unit is used for adjusting one, two or three lifting columns.

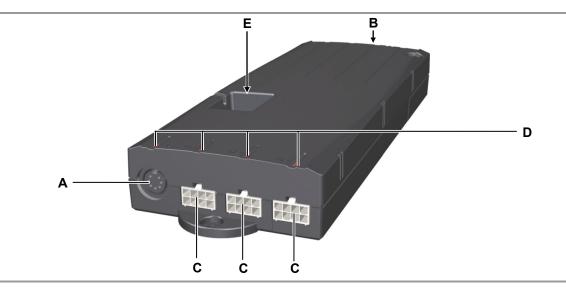


Figure 7COMPACT control unit

- A Connection for the control keypad
- **C** Connection for the lifting columns
- **E** Sensor connection / cascade connection
- **B** Mains power supply connection
- **D** Status LEDs

3.4 Control keypads

The control keypads are used to adjust the table height, to save positions (optional), and to adjust motor group 2. The table positions and optional saved (programmed) positions can be moved to directly.

3.4.1 Motion Assist control keypad

The Motion Assist control keypad has two keys for the up and down adjustments.



Figure 8Motion Assist control keypad

- A key (adjusting down)
- C Connection cable

- **B** Mounting surface

3.4.2 HSCO control keypad

The HSCO control keypad has two keys for the up and down adjustments.

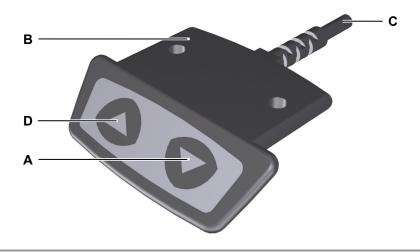


Figure 9HSCO control keypad

- A wey (adjusting down)
- C Connection cable

- **B** Mounting surface
- **D** key (adjusting up)

3.4.3 HSU Varioline control keypad

The HSU Varioline control keypad has two keys for the up and down adjustments.

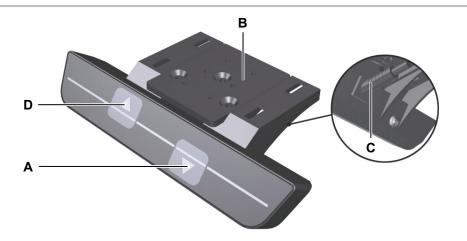


Figure 10 HSU Varioline control keypad

A key (adjusting down)

C Connection cable

- **B** Mounting surface
- **D** key (adjusting up)

3.4.4 HSU control keypad

The HSU control keypad has two keys for the up/down adjustment movements, four memory keys, a save key and a display.

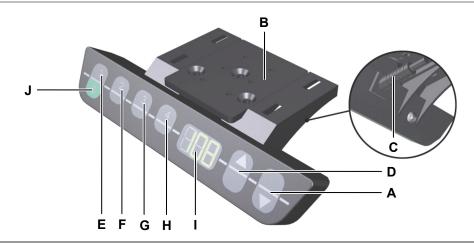


Figure 11 HSU control keypad

- A key (adjusting down)
- C Connection cable
- E memory key 1
- **G** a memory key 3
- I Display

- **B** Mounting surface
- **D** Akey (adjusting up)
- F amemory key 2
- H memory key 4
- J save key

3.4.5 HSF control keypad

The HSF control keypad has two keys for the up/down adjustment movements, four memory keys, two keys for motor group 2, a save key and a display.

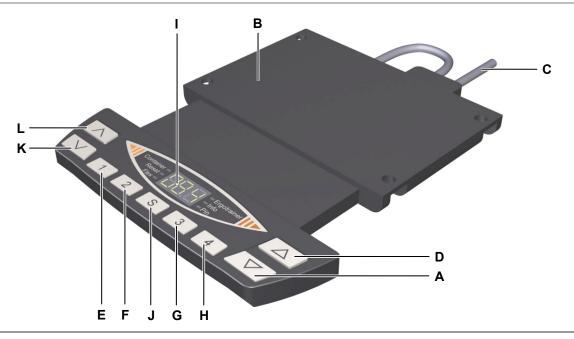


Figure 12 HSF control keypad

- C Connection cable
- E 1 memory key 1
- **G** memory key 3
- Display
- K motor group 2
 Adjusting downwards

- **B** Mounting surface
- **D** key (adjusting up)
- F 2 memory key 2
- H memory key 4
- J S save key
- L motor group 2

 Adjusting upwards

3.4.6 TOUCHbasic-inlay control keypad

The TOUCHbasic-inlay keypad has two keys for the up and down adjusting movements.



Figure 13 TOUCHbasic-inlay control keypad

D △ key (adjusting up)

3.4.7 TOUCHbasic-down control keypad

The TOUCHbasic-down keypad has two keys for the up and down adjusting movements.



Figure 14 TOUCHbasic-down control keypad

B Mounting surface

C Connection cable

3.4.8 TOUCHfx control keypad

The TOUCHfx control keypad has two keys for the up/down adjustment movements, four memory keys, a save key and a display.

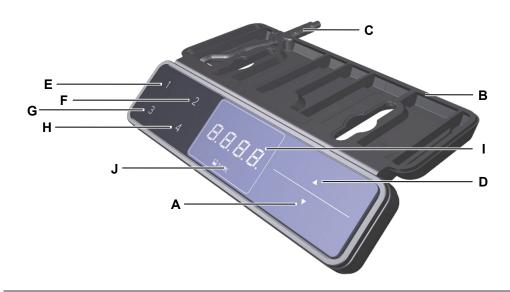


Figure 15 TOUCHfx control keypad

- A key (adjusting down)
- **C** Connection cable
- E Memory key 1
- **G** Memory key 2
- I Display

- **B** Mounting surface
- **D** key (adjusting up)
- F Memory key 3
- H Memory key 4
- J SAVE save key

3.4.9 TOUCHdown control keypad

The TOUCHdown control keypad has two keys for the up/down adjustment movements, four memory keys, a save key and a display.

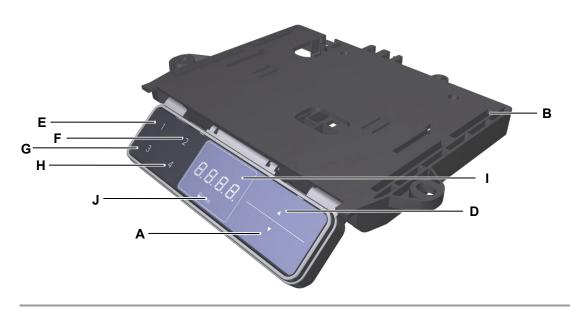


Figure 16 TOUCHdown control keypad

- **A ▼** key (adjusting down)
- **D** key (adjusting up)
- F Memory key 2
- H Memory key 4
- J SAVE save key

- **B** Mounting surface
- E Memory key 1
- **G** Memory key 3
- I Display
- F

3.4.10 TOUCHinlay control keypad

The TOUCHinlay control keypad has two keys for the up/down adjustment movements, two memory keys, a save key and a display.



Figure 17 TOUCHinlay control keypad

- A key (adjusting down)
- E Memory key 1
- Display

- **D** key (adjusting up)
- Memory key 2
- J SAVE save key

3.5 Lifting columns

The main components of the DD11S/DD21S lifting columns are the electric motor, the telescopic columns for adjustments, the outer support column, and the connecting cable. The end product will be attached to the motor housing of the lifting column. The foot base is attached to the foot end of the lifting column. Positional sensors are built in to allow for synchronized adjustments with multiple columns.

3.5.1 DD11S lifting column (single telescopic)

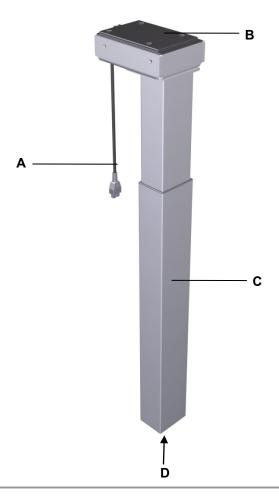


Figure 18 Main components of the DD11S lifting column

- A Connection cable
- **C** Outer column with one internal telescopic column
- B Head of the lifting column
- **D** Foot of the lifting column

3.5.2 DD21S lifting column (double telescopic)

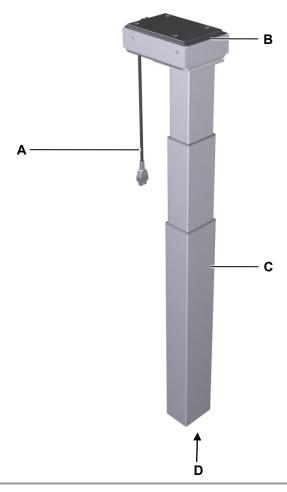


Figure 19 Major components of the DD21S lifting column

- A Connection cable
- **C** Outer column with two internal telescopic columns
- **B** Head of the lifting column
- **D** Foot of the lifting column


4. System configurations

Depending on the particular configuration, the DD11S/DD21S system can be combined with up to three lifting columns. The configurations with two and three lifting columns are described below:

Configuration 1:

SMARTeco control unit with one or two DD11S/DD21S lifting columns and a control keypad Installation steps:

- Install the lifting columns (see section 5.2, page 32)
- Install the control keypads (see section 5.3, page 40)
- Install the SMARTeco control unit (see section 5.4.1, page 41)
- Connect the control keypad and the lifting columns to the control unit (see section 5.5.1, page 50)
- Connect the power supply cable (see section 5.5.1, page 50)

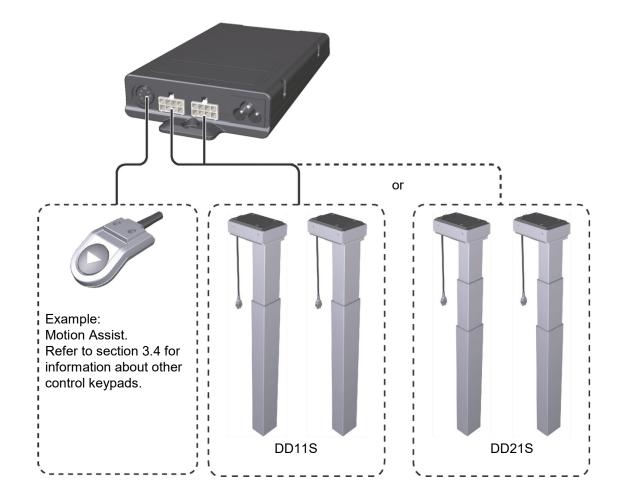

System configurations DD11S / DD21S

Configuration 2:

SMARTneo/SMARTneo-pro control unit with one or two lifting DD11S/DD21S lifting columns and a control keypad

Installation steps:

- Install the lifting columns (see section 5.2, page 32)
- Install the control keypads (see section 5.3, page 40)
- Install the SMARTneo/SMARTneo-pro control unit (refer to section 5.4.2, page 48)
- Connect the control keypad and the lifting columns to the control unit (see section 5.5.2, page 51)
- Connect the power supply cable (see section 5.5.2, page 51)




Configuration 3:

COMPACT control unit with one, two or three DD11S/DD21S lifting columns and a control keypad

Installation steps:

- Install the lifting columns (see section 5.2, page 32)
- Install the control keypads (see section 5.3, page 40)
- Install the COMPACT control unit (see section 5.4.3, page 49)
- Connect the control keypad and the lifting columns to the control unit (see section 5.5.3, page 52)
- Connect the power supply cable (see section 5.5.3, page 52)

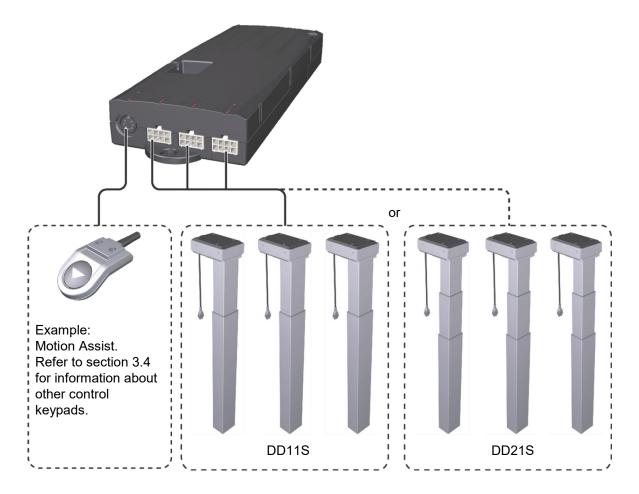

Installation DD11S / DD21S

5. Installation

5.1 Safety notices to observe during installation

Basic safety rules must be followed in order to ensure that the end product can be continually operated in a safe manner. These rules must be observed while using the end product and while installing the SMART/COMPACT control unit, the control keypad, the DD11S/DD21S lifting columns, and the slave drive in the end product.

Avoiding electrical faults

Be sure to consider the length of the power cord when designing the dimensions for your end product in order to minimize the associated risks.

Routing the electrical cables

When routing the cables, be sure that:

- the cables cannot get jammed,
- no mechanical load (such as pulling, pushing or bending) will be put on the cables, and
- the cables cannot be damaged in any way.

Fasten all cables using sufficient strain relief and kink prevention methods.

5.1.1 Reliability

The safety and reliability of the end product containing DewertOkin components can be ensured by using the proper construction methods as described below.

Overheating

A thermal monitor switches the SMART/COMPACT control unit off if it overheats.



CAUTION

The SMART/COMPACT control unit is equipped with a thermal monitor (circuit breaker) that triggers when the unit overheats. If the temperature control has triggered, remove the control unit from the power supply, allow it to rest for 20 to 30 minutes and try again. If the control unit still does not function, please contact your supplier or sales agent.

Avoiding fatigue fractures

- Install the lifting column in the end product so that it is properly aligned. This will help prevent shear stress.
- Do not position the lifting column at a slanted angle when installing it in the end product. A slanted
 angle between the intended direction of movement of the end product and the lifting column's direction will create shear stress and could lead to a fatigue fracture.

DD11S / DD21S Installation

Avoiding a pinching hazard

When designing your product, you should take the lifting column's adjustment movement into account with passive safety mechanisms and with the appropriate safety notices in your operating instructions.

- Installation methods for ensuring passive safety: Install the lifting columns so that none of the positions where shear and pinch hazards exist are accessible externally.
- ▶ Make sure that your operating instructions inform the user of these safety points.
- ➤ Structural modifications and improper installation which do not follow the installation steps or the safety instructions found in these installation instructions may result in serious injuries to users (e.g. crushing injuries). Structural modifications may only be made after consulting with DewertO-kin and receiving our consent. Follow all instructions from DewertOkin, especially those found in these installation instructions.

NOTICE

Compliance with the intended usage and other regulations

Any further processing of the products that contradicts the proper and intended usage is forbidden.

The manufacturer or installer of the end product must ensure that all legal and regulatory requirements regarding the end product's manufacture, installation and customer support are followed.

5.1.2 Selecting the tabletop

The DIN Technical Report 147 describes the following information:

- · Corner and edge design
- · Exterior surfaces
- Surface brightness
- Surface finish
- Min. 3 mm edge radius
- etc

This information shall be considered binding when selecting the tabletop.

5.1.3 Ergonomics

The operating instructions that you are creating for the end product must provide instructions for an ergonomically correct installation where the control keypads are easily accessible and the table is freely accessible.

5.1.4 Use of the system by the end customer

The operating instructions for the end customer must refer to standards regarding:

- Standards for usage, arrangement of equipment in the working area, the planned activities and the working postures and positions
- Standards for describing the adjustment mechanisms with instructions for ergonomic adjustments

Please refer to the guidelines for the design of screens and office workstations from the German Trade Association for Printing and Paper Processing (BGI 650).

Installation DD11S / DD21S

5.2 Installing the DD11S and DD21S lifting columns

Before installing and connecting the DD11S/DD21S lifting columns, make sure that you are observing all of the safety notices found in the "Safety notices to observe during installation" section.

5.2.1 Mounting the table base

▶ Use M6 cylinder head screws (with strength grade 8.8), as shown in Figure 20. The tightening torque must not exceed 10 Nm.

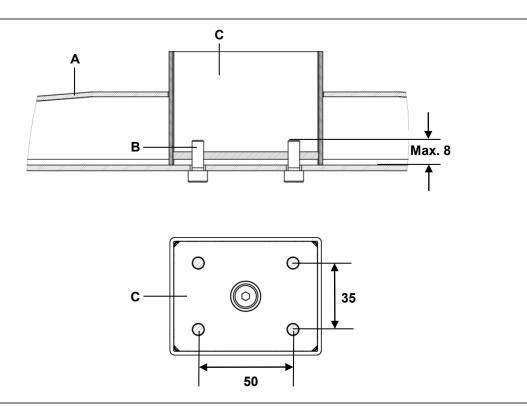


Figure 20 Mounting the table base (version A) (in mm)

A Base plate

B M6 cylinder head screw (8.8)

C Foot of the lifting column

DD11S / DD21S Installation

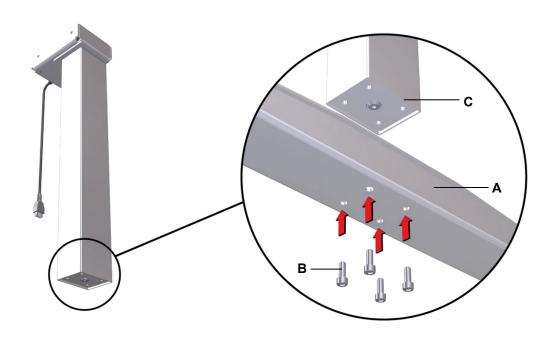


Figure 21 Example: Mounting the table base

A Base plate

B M6 cylinder head screw (8.8)

C Foot of the lifting column


1 Use four screws to attach the table base to the foot end of the DD11S/DD21S lifting columns, as shown in Figure 21 (maximum tightening torque is 10 Nm). The mounting dimensions are shown in Figure 20.

2 Repeat step 1 with all other lifting columns.

Installation DD11S / DD21S

5.2.2 Mounting the table base (version B)

▶ Use M6 cylinder head screws (with strength grade 8.8), as shown in Figure 22. The tightening torque must not exceed 10 Nm.

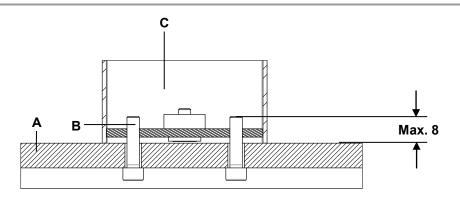

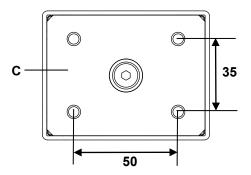


Figure 22 Mounting the table base (version B) (in mm)

A Base plate

B M6 cylinder head screw (8.8)

C Foot of the lifting column

DD11S / DD21S Installation

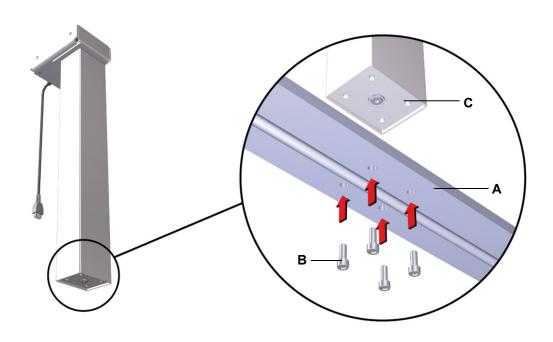


Figure 23 Example: Mounting the table base (version B)

A Base plate

B M6 cylinder head screw (8.8)

C Foot of the lifting column


1 Use four screws to attach the table base to the foot end of the DD11S/DD21S lifting columns, as shown in Figure 23 (maximum tightening torque is 10 Nm). The mounting dimensions are shown in Figure 22.

2 Repeat step 1 with all other lifting columns.

Installation DD11S / DD21S

5.2.3 Mounting the table base (for variant D)

▶ Use M6 countersunk screws (with strength grade 8.8), as shown in Figure 24. The tightening torque must not exceed 10 Nm.

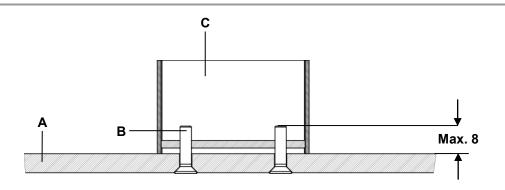

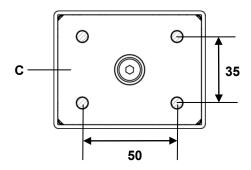


Figure 24 Mounting the table base (version D) (in mm)

A Base plate

B M6 countersunk screws (8.8)

C Foot of the lifting column

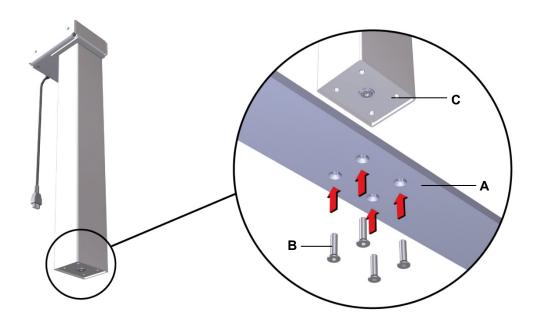


Figure 25 Example: Mounting the table base (for variant D)

A Base plate

B M6 countersunk screws (8.8)

C Foot of the lifting column

- 1 Use four screws to attach the table base to the foot end of the DD11S/DD21S lifting columns, as shown in Figure 25 (maximum tightening torque is 10 Nm). The mounting dimensions are shown in Figure 24.
- 2 Repeat step 1 with all other lifting columns.

5.2.4 Mounting the table frame

▶ Use M8 bolts (with strength grade 8.8), as shown in Figure 26. The tightening torque must not exceed 20 Nm.

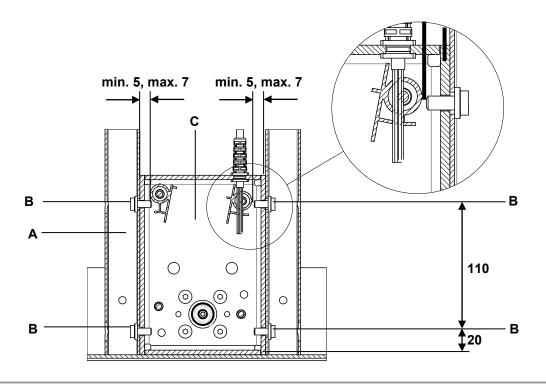


Figure 26 Example: Mounting the table frame (dimensions in mm)

A Table frame

B Cylinder head screws M8 (8.8)

C Head of the lifting column

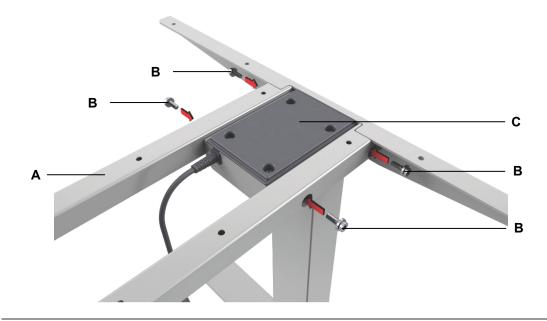


Figure 27 Example: Mounting the table frame

- **A** End product (e.g. a table frame)
- **B** Cylinder head screws M8 (8.8)

- C Head of the lifting column
- 1 Place the table frame with the holes over the H



CAUTION

Work on electrical components should be conducted only when the mains power connection for the control unit is unplugged.

- 2 Move the table to the starting position, so that the lifting columns are fully retracted.
- 3 Pull out the control unit's mains power plug!
- 4 Remove all of the lifting columns' cables from the sockets of the control unit.
- **5** Remove all lifting columns from the table frame.

5.3 Installing the control keypads

NOTICE

• The control keypad must be installed in an ergonomically correct position so that the user can reach it easily.

• When installing the control keypad, take into account the thickness of the tabletop.

5.3.1 Motion Assist control keypad

Two screws are used to attach the Motion Assist control keypad to the underside of the table (at the table's front edge), as shown in Figure 29.

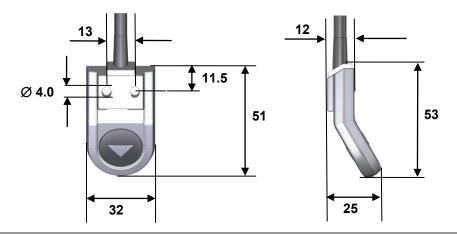


Figure 28 Motion Assist control keypad, installation dimensions (in mm)

5.3.2 Installing the control keypad to the tabletop

▶ Example: Use screws (B in Figure 29) which meet the requirements of DIN 7981 with Ø 3.9 mm and of suitable length (10 mm plus the screw-in depth into the table), screw head: Ø 7.5 mm.

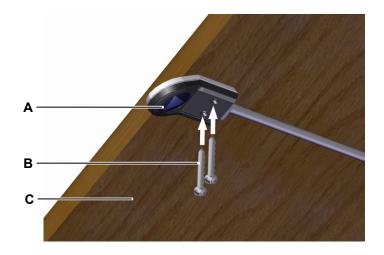


Figure 29 Example: Mounting the Motion Assist control keypad

A Motion Assist control keypad

B Screws

C Tabletop

5.3.3 HSCO control keypad

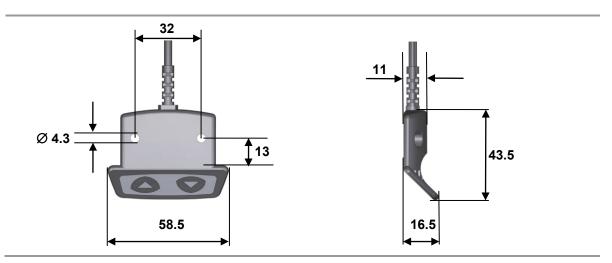


Figure 30 HSCO control keypad, installation dimensions (in mm)

5.3.4 HSU Varioline control keypad

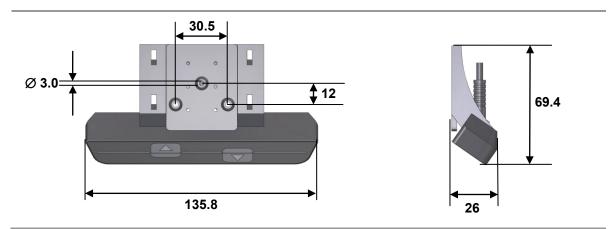


Figure 31 HSU Varioline control keypad, installation dimensions (in mm)

5.3.5 HSU control keypad

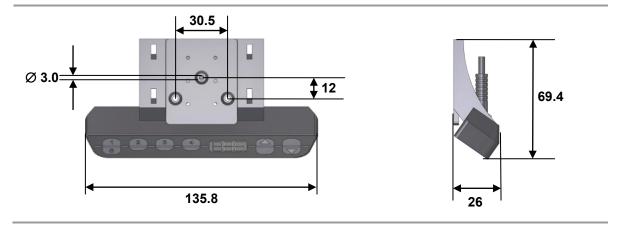


Figure 32 HSU control keypad, installation dimensions (in mm)

5.3.6 HSF control keypad

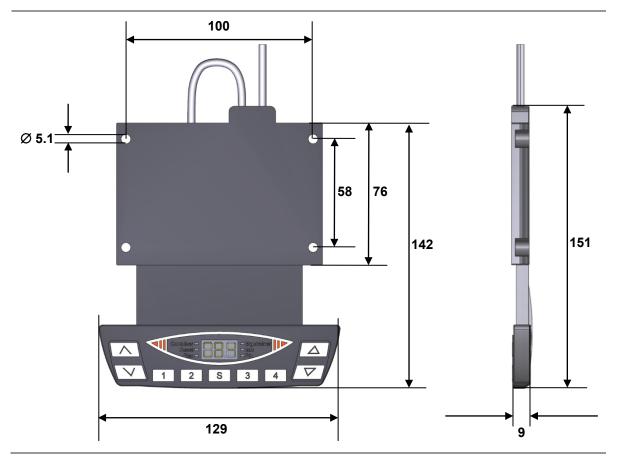


Figure 33 HSF control keypad, installation dimensions (in mm)

5.3.7 TOUCHbasic-inlay control keypad

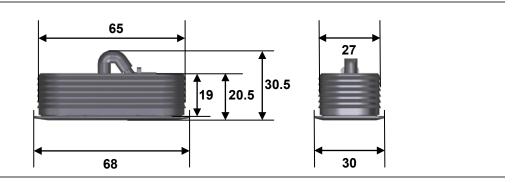


Figure 34 TOUCHbasic-inlay keypad, mounting dimensions (in mm)

5.3.8 TOUCHbasic-down control keypad

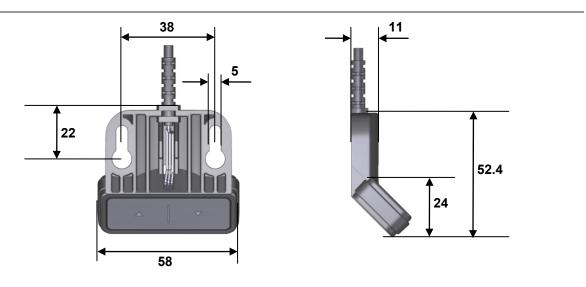


Figure 35 TOUCHbasic-down keypad, mounting dimensions (in mm)

5.3.9 TOUCHfx control keypad

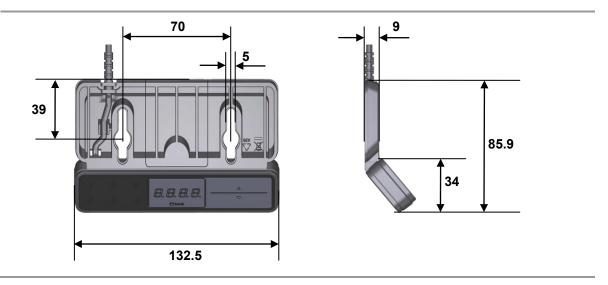


Figure 36 TOUCHfx keypad, mounting dimensions (in mm)

5.3.10 TOUCHdown control keypad

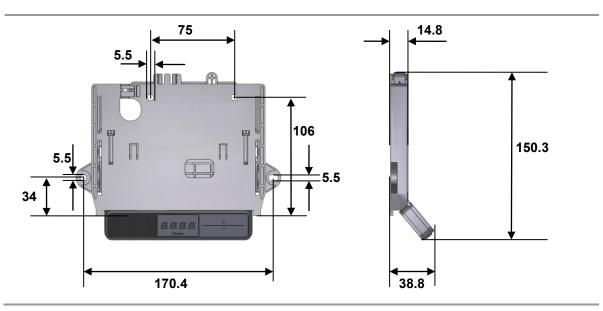


Figure 37 TOUCHdown keypad, mounting dimensions (in mm)

5.3.11 TOUCHinlay control keypad

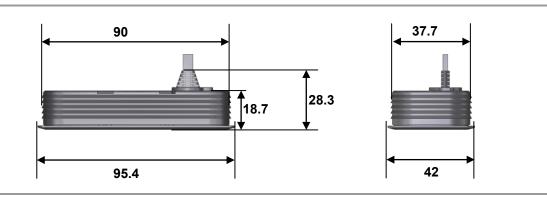


Figure 38 TOUCHinlay keypad, mounting dimensions (in mm)

5.4 Installing the SMART/COMPACT control units

NOTICE

When installing the control unit, take into account the thickness of the tabletop.

▶ Mount the control unit under the centre of the table. The best installation position is between the table frames. Be sure to note the length of the connecting cables during the installation.

▶ Use 4.8xL raised-head screws (according to requirements of DIN 7981) with a 9.5 mm head diameter and of suitable length (2 mm + screw-in depth into the table). Tighten the screw using a maximum torque of 2 Nm.



CAUTION

You should only install and uninstall the control unit when it is completely disconnected from any live current!

Install the control unit as shown in Figure 40 (control unit SMARTeco), Figure 42 (control unit SMARTneo / SMARTneo-pro) or Figure 44 (control unit COMPACT):

- 1 Mark the drill holes. The drilling dimensions are specified in Figure 39 (control unit SMARTeco), Figure 41 (control unit SMARTneo / SMARTneo-pro) or Figure 43 (control unit COMPACT).
- 2 Use a suitable drill to drill the two holes.
- 3 Screw the control unit onto the tabletop.
- **4** Route all connecting cables under the tabletop so that they cannot be pinched during the table's lifting movements.

5.4.1 SMARTeco control unit

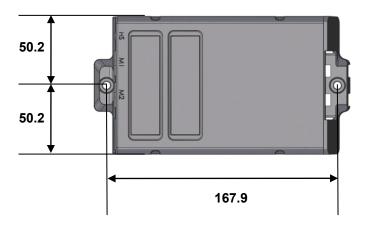


Figure 39 Mounting dimensions: SMART control unit (in mm)

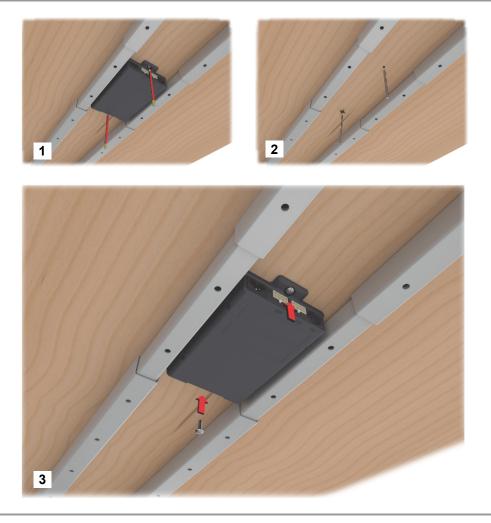


Figure 40 Mounting the SMARTeco control unit

5.4.2 SMARTneo / SMARTneo-pro control unit

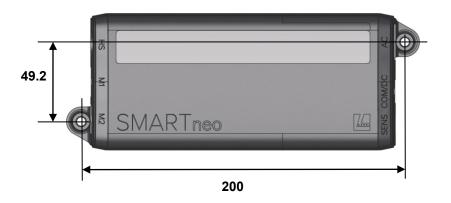


Figure 41 Mounting dimensions: SMARTneo / SMARTneo-pro control unit (in mm)

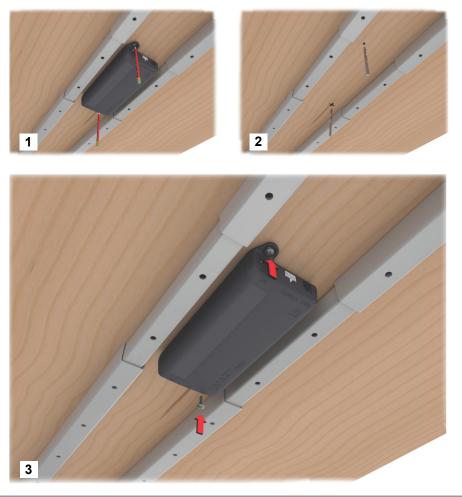


Figure 42 Mounting the SMARTneo-pro control unit

5.4.3 COMPACT control unit

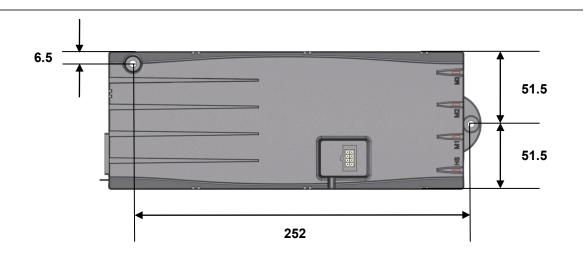


Figure 43 Mounting dimensions: COMPACT control unit (in mm)

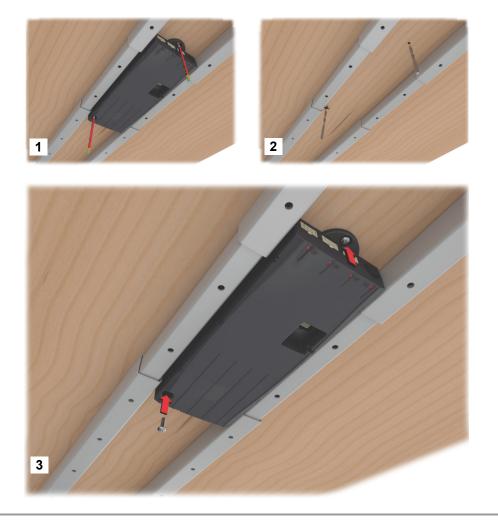


Figure 44 Mounting the COMPACT control unit

5.5 Electrical connections for the SMART/COMPACT control units



CAUTION

Electrical components should be connected or disconnected only when the power supply cord is unplugged.

► There is a delay after the supply voltage is applied before the device actually turns on. Wait at least seven seconds before beginning the commissioning.

5.5.1 Connecting the lifting columns and the control keypad to the SMARTeco control unit

The lifting columns and the control keypad are both connected to the front of the SMARTeco control unit (the unit for adjusting one or two lifting columns). The following illustration shows the location of these connections.



Figure 45 Connection ports on the SMARTeco control unit: Model used for two lifting columns

- A Connection for the control keypad
- **B** Mains power supply connection
- C Connection for the lifting columns

NOTICE

Be sure to connect the power cable into the control unit after all other connections are plugged in.

5.5.2 Connecting the lifting columns and the control keypad to the SMARTneopro control unit

The lifting columns and the control keypad are both connected to the front of the SMARTneo / SMARTneo-pro control unit (the unit for adjusting one or two lifting columns). The following illustration shows the location of these connections.

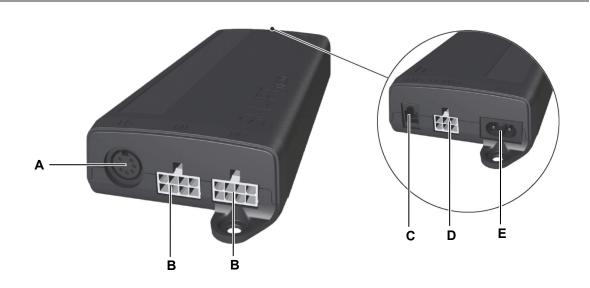


Figure 46 Connections on the SMARTneo / SMARTneo-pro control unit: Model used for two lifting columns

- A Connection for the control keypad
- **C** Sensor connection (only for SMART-neo-pro)
- E Mains power supply connection
- **B** Connection for the lifting columns
- **D** Cascading connection

NOTICE

Be sure to connect the power cable into the control unit after all other connections are plugged in.

5.5.3 Connecting the lifting columns and the control keypad to the COMPACT control unit

The lifting columns and the control keypad are both connected to the front of the COMPACT control unit. A sensor or a second control unit can optionally be connected with a cable to the top of the control unit.

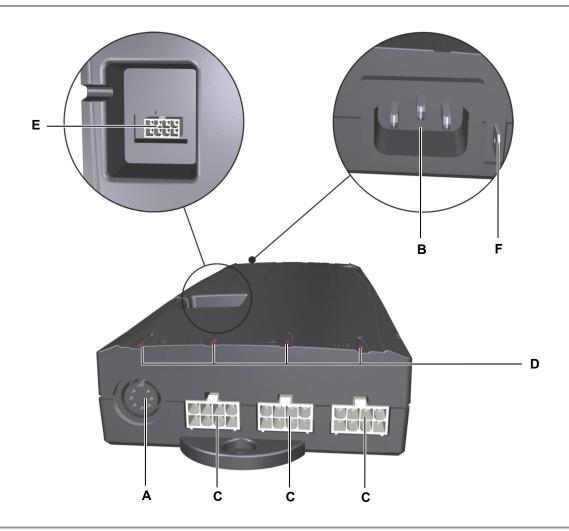


Figure 47 Connection ports on the COMPACT control unit

- A Connection for the control keypad
- C Connection for the lifting columns
- **E** Sensor connection / cascade connection
- **B** Mains power supply connection
- **D** Status LEDs
- **F** Protective earth connection

NOTICE

Be sure to connect the power cable into the control unit after all other connections are plugged in.

5.6 Mounting the sensor unit

5.6.1 SMARTneo-pro control unit

The SMARTneo-pro control unit can be equipped with a protective mechanism. For this purpose, the sensor is mounted under the table top between the table frames.

▶ The sensor is attached to both the table frame and the tabletop. The contact point with the tabletop is marked with a yellow dot, as shown in Figure 48.

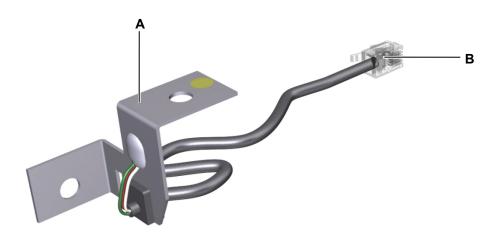


Figure 48 Sensor

A Sensor

B Connecting cable (connection to the SMARTneo-pro control unit)

NOTICE

This protective mechanism only works when the sensor is correctly installed. Make sure that the side of the sensor marked with a yellow dot is facing the tabletop.



CAUTION

- You should only install and remove the sensor when it is completely disconnected from any live current!
- This safety mechanism is not effective unless the drilled holes are aligned exactly with each other. Personal injury and property damage can result from improper alignment.
- ▶ The screws are not included in our delivery.

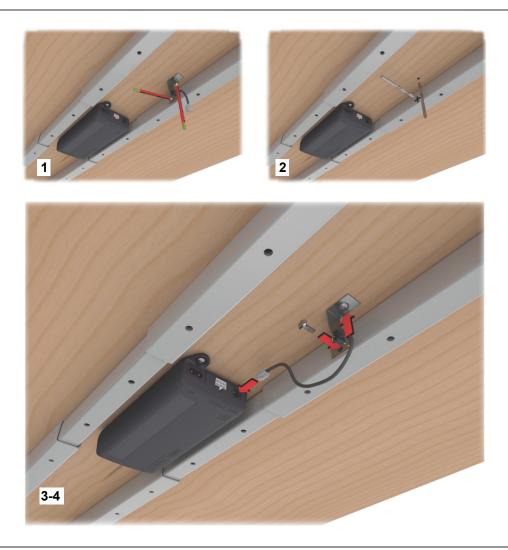


Figure 49 Mounting and connecting the sensor to the SMARTneo-pro control unit

Mount the sensor bracket marked with the yellow dot to the underside of the tabletop. Mount the second bracket to the table frame (as shown in Figure 49).

- ▶ Before mounting the sensor, make sure that the cables are long enough to reach the sensor in that position. Also make sure that the cables are routed so that they cannot be pinched during the up and down movements.
- 1 If no holes are pre-drilled, mark the drill holes for mounting the sensor (on underside of tabletop and on table frame).
- 2 Drill the holes for mounting the sensor.



A CAUTION

Observe the following information in order to ensure that the safety mechanism functions properly:

- If the screws are not tightened properly, the safety mechanism will not function effectively.
- Use both screws.
- Take appropriate measures to prevent the screws from loosening during operations: loose screws will prevent the safety mechanism from functioning effectively.
- The connected cables may be neither too slack nor too tight.
- 3 Screw on the sensor. Pay attention to the correct positioning (the side with the yellow dot should be mounted to the underside of the tabletop). Observe the recommended torques:
 - Mount to table frame: 3 Nm,
 - Mount to tabletop: 2 2.5 Nm (depending on the type of wood in use).



CAUTION

In order to ensure the effectiveness of the safety mechanism, note the following when connecting the processor:

- If only one sensor is being connected, it should be connected to the socket number 1.
- If a second sensor is being connected to the processor, connect it to the other available socket.
- Only one sensor may be connected to the processor when you are cascading several control units! This one sensor should then be connected to the socket number 1.
- 4 Connect the cable of the sensor unit to the SMARTneo-pro control unit (see Figure 46).

5.6.2 COMPACT control unit

The COMPACT control unit can be equipped with a protective mechanism. A sensor unit (sensor and processor) can be mounted under the tabletop between the table frames.

▶ The sensor is attached to both the table frame and the tabletop. The contact point with the tabletop is marked with a yellow dot, as shown in Figure 50.

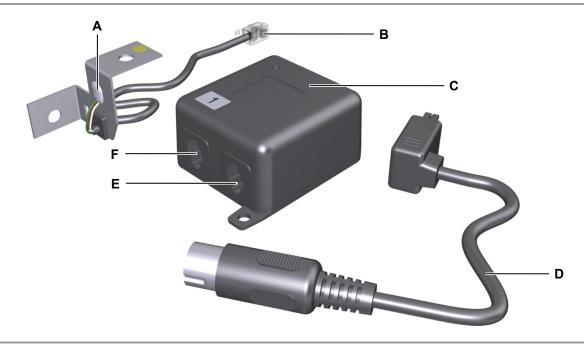


Figure 50 Sensor unit

- A Sensor
- **C** Processor
- **E** Connection for the connecting cable for a second sensor
- **B** Connecting cable (for connection to processor)
- **D** Connecting cable for control unit
- F Connection for the sensor cable

NOTICE

This protective mechanism only works when the sensor is correctly installed. Make sure that the side of the sensor marked with a yellow dot is facing the tabletop.



L CAUTION

- You should only install and remove the sensor when it is completely disconnected from any live current!
- This safety mechanism is not effective for the system unless the drilled holes are aligned exactly with each other. Personal injury and property damage can result from improper alignment.
- The screws are not included in our delivery.

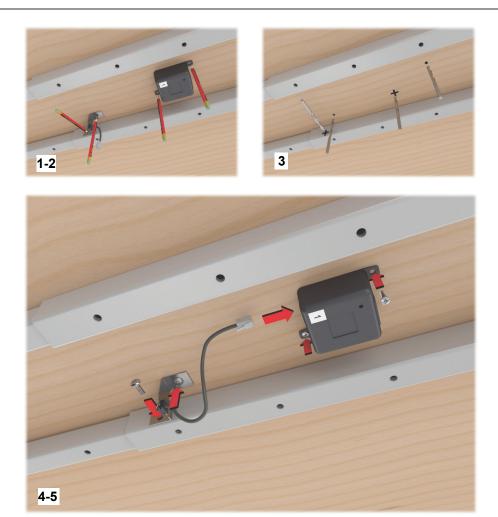


Figure 51 Mounting the sensor unit (sensor and processor)

Mount the sensor bracket marked with the yellow dot to the underside of the tabletop. Mount the second bracket to the table frame (as shown in Figure 51, and described below).

- ▶ Before mounting the sensor, make sure that the cables are long enough to reach the sensor in that position. Also make sure that the cables are routed so that they cannot be pinched during the up and down movements.
- 1 Mark the drill holes used for mounting the processor. Drill pilot holes and then screw the processor on the underside of the tabletop so that it is in the vicinity of the control unit.
- 2 If no holes are pre-drilled, mark the drill holes for mounting the sensor (on underside of tabletop and on table frame).
- **3** Pre-drill the holes for mounting the sensor (in the tabletop and on the table frame, if no holes are there).



A CAUTION

Observe the following information in order to ensure that the safety mechanism functions properly:

- If the screws are not tightened properly, the safety mechanism will not function effectively.
- Use both screws
- Take suitable measures to prevent the screws from loosening during operations. Improperly tightened screws will prevent the safety equipment from working properly.
- The connected cables may be neither too slack nor too tight.
- 4 Screw on the sensor. Pay attention to the correct positioning (the side with the yellow dot should be mounted to the underside of the tabletop). Observe the recommended torques:
 - Mount to table frame: 3 Nm,
 - Mount to tabletop: 2 2.5 Nm (depending on the type of wood in use).



A CAUTION

In order to ensure the effectiveness of the safety mechanism, note the following when connecting the processor:

- If only one sensor is being connected, it should be connected to the socket number 1.
- If a second sensor is being connected to the processor, connect it to the other available socket.
- Only one sensor may be connected to the processor when you are cascading several control units! This one sensor should then be connected to the socket number 1.
- **5** Connect the sensor unit's cable to the processor (port F in Figure 50).
- 6 If a second sensor will be connected, connect the second sensor unit's cable to the processor (port E in Figure 50).
- 7 Connect the processor's cable to the COMPACT control unit (see Figure 47).

5.6.3 Important information about collision protection

Intelligent System Protection (ISP)

ISP is a state-of-the-art collision protection system. It substantially reduces crushing hazards.



CAUTION

Danger of pinching/crushing injuries!

- In spite of the ISP collision protection, there may still be a risk of pinching and crushing in exceptional cases, since not only the control unit, but also the interaction between the mechanical and electronic systems is responsible for cutting out the motor! In addition, the mechanical components, motor and ambient conditions all affect cut-out sensitivity!
- Therefore, this residual risk cannot be entirely ruled out and the manufacturer may not be held liable!
- ▶ The ISP-sensitivity value and the ISP-cut-out value depend on the whole system (the mechanical and electrical components). Please contact your supplier or dealer to determine the ISP capabilities of a height-adjustable table.
- ▶ Please note the following for maximizing ISP functionality: In order to ensure the best possible collision protection, a mechanical brake must be built in which activates when the heightadjustable tabletop moves down.
- The cut-out sensitivity may be reduced under a load whenever there is no mechanical brake being used. However, if there is no load on the tabletop, the ISP collision protection will function properly even without a brake.
- ▶ As soon as the ISP has stopped the height-adjustable tabletop, you may then adjust the desktop only in the opposite direction (the safety feature initially prevents you from adjusting the desk in the same direction that triggered the ISP)!
- ▶ The parameters are used to adjust the ISP cut-out level.

Drive back

▶ The "drive back" function is only active if the collision protection (ISP, pinch protection strip) has been activated.

After a safety function is triggered (by ISP or the pinch protection strip), the tabletop automatically moves a defined distance in the opposite direction. This immediately eliminates the pinching risk.



CAUTION

Danger of pinching/crushing injuries!

- In spite of the ISP collision protection, there may still be a risk of pinching and crushing in exceptional cases, since not only the control unit, but also the interaction between the mechanical and electronic systems is responsible for cutting out the motor! In addition, the mechanical components, motor and ambient conditions all affect cut-out sensitivity!
- Therefore, this residual risk cannot be entirely ruled out and the manufacturer may not be held liable!

5.7 Mains power supply for the SMART/COMPACT control units



A CAUTION

Please follow these operating instructions carefully. You could be injured by fire or electrical shock if you do not follow these assembly instructions.

The appropriate power cord is included, depending on the regional version (USA, continental Europe, the UK, Japan or Australia).



CAUTION

Only use the proper power cable that is permitted in your country. Be sure to use the correctly shaped plug, as shown in the following illustration.

SMARTeco and COMPACT

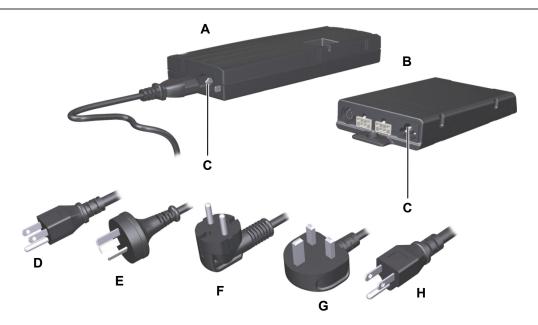


Figure 52 Variants of the SMARTeco and COMPACT mains power cable

- A COMPACT control unit
- **C** Mains power supply connection
- **E** Power plug (Australia)
- **G** Power plug (United Kingdom)

- **B** Control unit SMARTeco
- **D** Power plug (USA)
- **F** Power plug (EURO flat plug)
- H Power plug (Japan)

SMARTneo / SMARTneo-pro

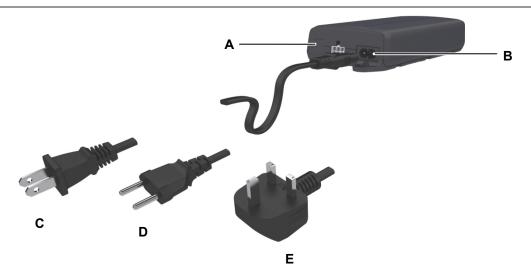


Figure 53 Variants of the SMARTneo-pro power supply cable

A SMARTneo control unit (example)

B Mains power supply connection

C Power plug (EURO flat plug)

D Power plug (United Kingdom)

E Power plug (USA)

After plugging the power plug into the power outlet,

NOTICE

There is a delay after the supply voltage is applied before the device actually turns on. Wait at least seven seconds before beginning the commissioning.

➤ You will need to carry out a reset movement on the control unit (see section 6.1 on page 62) after the initial commissioning.

Initial commissioning DD11S / DD21S

6. Initial commissioning

NOTICE

The DD11S/DD21S system must first be fully installed (see chapters 4 and 5) and all components must be connected before you can carry out the initial commissioning.

It is not possible to connect a second control unit or additional lifting columns later.

NOTICE

You must carry out a reset (refer to section 6.1) after you disconnect the cable that connects a component (drive, handset, etc.) to the control unit for the DD11S/DD21S system.

6.1 Reset during initial commissioning and after the removal of connecting cables



CAUTION

Danger of pinching/crushing injuries!

No system-based safety mechanism is enabled during the reset process.

- 1 Connect the power cable to the control unit's power connection.
- 2 Insert the mains power plug into a power outlet.
- **3** Press and hold the \bigcirc key (adjusting downward) until the tabletop moves all the way down.
- 4 Press the \(\bigcup \) key for at least five seconds longer.
- **5** The lifting column moves briefly downwards, then immediately upwards and then comes to a stop.
- **6** The reset is now finished. You can now press the corresponding key to raise or lower the lifting columns.

DD11S / DD21S Notes for operation

7. Notes for operation

These installation instructions do not contain all information required for the safe operation of the end product. They only describe the installation and operation of the lifting columns as components (as defined in the Machinery Directive as a "partially assembled piece of machinery").

7.1 General information



CAUTION

Danger of pinching/crushing injuries!

Make sure that there are no persons (especially children) or objects located in the range of movement while the table is moving.

Delayed start-up

Note that this device switches on with a slight delay after the power cord is plugged in and voltage is applied. Wait at least seven seconds before beginning the commissioning.

Power-on time / intermittent operations

NOTICE

The SMART/COMPACT control units have been designed for intermittent operations. Intermittent operation is an operational mode where the drive must pause after a specified maximum period of operation (power-on time). This protects the drive from overheating. Extreme overheating can cause a malfunction.

▶ The ratings plate specifies the maximum power-on time and the required pause intervals.

Avoiding electrical risks



CAUTION

Make sure that all live (current-carrying) parts of the drive system and power supply cannot be touched. In particular, be sure that unused power and control unit connections are covered adequately.

Notes for operation DD11S / DD21S

Reducing the risk of overheating with the thermal monitor



CAUTION

The SMART/COMPACT control unit is equipped with a thermal monitor (circuit breaker) that triggers when the unit overheats. If the temperature control has triggered, remove the control unit from the power supply, allow it to rest for 20 to 30 minutes and try again. If the control unit still does not function, please contact your supplier or sales agent.

Stopping the DD11S/DD21S system in an emergency

Pull out the power plug in order to shut off the DD11S/DD21S system. The power plug must always be accessible during operations so that emergency shut-off is possible.

Avoiding cable damage

Be sure that your operating instructions inform the user about the possible cable risks.

NOTICE

The cables (in particular the electrical connection for the drives and the power supply cable for the drive system) must not be squashed or crushed. In order to prevent damage to the drive, no mechanical strain should be placed on the cables.

8. Operating the control keypads

8.1 Functions of the Motion Assist control keypad



Figure 54 Motion Assist control keypad

A Key for adjusting downwards

D Key for adjusting upwards: located on the underside of the control keypad

8.1.1 Key assignments for the Motion Assist control keypad

Button	Function
	Adjusting downwards
	Adjusting upwards
	For carrying out the reset motion after a malfunction (refer to 6.1).

▶ Press the key on the control keypad to raise or lower the tabletop. Keep pressing the key until the tabletop reaches the desired height.

8.2 Functions of the HSCO control keypad

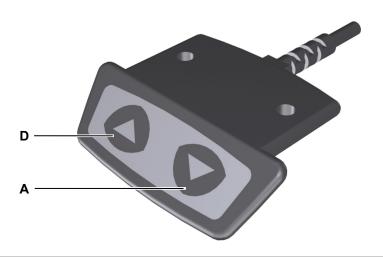


Figure 55 HSCO control keypad

A Key for adjusting downwards

D Key for adjusting upwards

8.2.1 Key assignments for the HSCO control keypad

Button	Function
	Adjusting downwards
	Adjusting upwards
	For carrying out the reset motion after a malfunction (refer to 6.1).

▶ Press the key on the control keypad to raise or lower the table. Keep pressing the key until the desired height of the table is reached.

8.3 Functions of the HSU Varioline control keypad

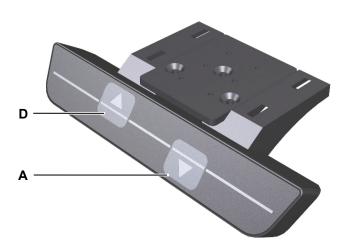


Figure 56 HSU Varioline control keypad

A Key for adjusting downwards

D Key for adjusting upwards

8.3.1 Key assignments for the HSU Varioline control keypad

Button	Function
	Adjusting upwards
	Adjusting downwards
	For carrying out the reset motion after a malfunction (refer to 6.1).

▶ Press the key on the control keypad to raise or lower the table. Keep pressing the key until the desired height of the table is reached.

8.4 Functions of the HSU control keypad

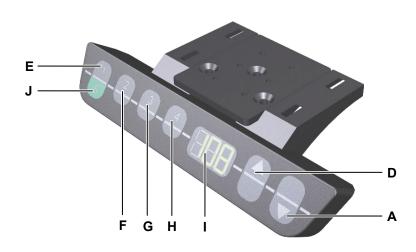


Figure 57 HSU control keypad

- **A** Key for adjusting downwards
- E Memory key 1
- **G** Memory key 3
- I Display

- **D** Key for adjusting downwards
- F Memory key 2
- H Memory key 4
- J Save key S

8.4.1 Key assignments for the HSU control keypad

Key / indicator	Function	Key / indicator	Function
	Display	3	Memory key 3
	Memory key 1	4	Memory key 4
S	Save key S		Adjusting upwards
2	Memory key 2		Adjusting downwards
			For carrying out the reset motion after a malfunction (refer to 6.1).

68 88721 2.0 **/**

- ▶ The display on the HSU control keypad is a three-character positional and information display.
- Using the keys for upwards or downwards adjustments: Press and hold the corresponding key until the desired position is reached.

8.4.2 Advanced functions

Saving a position

Any table position can be saved using this function.

- ▶ When the control unit is turned on for the first time, all positions are equal to the smallest table position (the lower end position).
- ▶ Only one table position can be stored per memory key.

To save a position, proceed as follows:

Move the table to the position that you want to save. The position is shown on the display (e.g. 73 cm).



073

2 Press the green Save key.



S – is now shown on the display.



3 Press the desired memory key (e.g. 2).



S 2 is shown on the display.

4 The set table position is now saved for the selected memory key. A double-click noise can then be heard. After about 2 seconds, the saved table position is displayed.

Adjusting the table to a saved height position

This function allows you to set the table to a saved table position.



1 Press and hold the memory key that corresponds to the desired table position (e.g. position 2).

The table will move as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

2 Release the key when the table has reached the saved position.

073

The current (saved) position is shown on the display.

8.5 Functions of the HSF control keypad

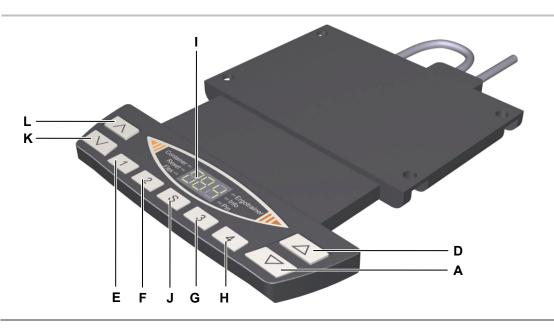


Figure 58 HSF control keypad

- A Key for adjusting downwards
- E Memory key 1
- G Memory key 3
- I Display
- K Motor group 2, adjust downwards
- D Key for adjusting upwards
- F Memory key 2
- H Memory key 4
 - J Save key S
- L Motor group 2, adjust upwards

8.5.1 Key assignments for the HSF keypad

Key / indicator	Function	Key / indicator	Function
	Display and LED indicators (refer to section 8.5.2)	S	Memory key
	Motor group 2, adjust up- wards	3	Memory key 3
	Motor group 2, adjust downwards	4	Memory key 4
1	Memory key 1		Adjusting upwards
2	Memory key 2		Adjusting downwards
			Reset movement after a malfunction (see chapter 6.1)

▶ Using the keys for upwards or downwards adjustments: Press and hold the corresponding key until the desired position is reached.

8.5.2 Display functions

The display on the HSF control keypad is a three-character positional and information display. There are also 6 information LEDs arranged side-by-side.

LED	Function
Container LED	This LED indicates that the container stop is enabled. (Depending on control unit model in use.)
Reset LED	This LED indicates that a control unit reset is being carried out. (Depending on control unit model in use.)
Flex LED ¹⁾	This LED indicates that the Flex function is enabled. (Depending on control unit model in use.)
Ergo-trainer LED ¹⁾	This LED indicates that the ergo-trainer is enabled. (Depending on control unit model in use.)
Info LED	This LED indicates that important information is displayed on the positional/information display. (Depending on control unit model in use.)
PIN LED ¹⁾	This LED indicates that the PIN CODE function is enabled.

¹⁾ Not available with the SMART/COMPACT control unit.


8.5.3 Advanced functions

Saving a position

Any table position can be saved using this function.

- ▶ When the control unit is turned on for the first time, all positions are equal to the smallest table position (the lower end position).
- Only one table position can be stored per memory key.

To save a position, proceed as follows:

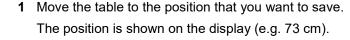

2 Press the Save key.

S – is now shown on the display.

S 2 is shown on the display.

3 Press the desired memory key (e.g. 2).

4 The set table position is now saved for the selected memory key. A double-click noise can then be heard. After about 2 seconds, the saved table position is displayed.

88721 2.0 71

073









Adjusting the table to a saved height position

This function allows you to set the table to a saved table position.

2

1 Press and hold the memory key that corresponds to the desired table position (e.g. position 2).

The table will move as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

2 Release the key when the table has reached the saved position.

073

The current (saved) position is shown on the display.

Adjusting the motor group 2 to a saved position

This function allows you to set the table (motor group 2) to a saved table position.

Move table upwards (motor group 2):



1 Press the key for moving up. Press the key down until the table has reached the saved position.

The table will move up as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

Move table upwards (motor group 2):



2 Press the \(\subseteq \) key for moving up. Press the key down until the table has reached the saved position.

The table will move down as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position. Release the key when the table has reached the saved position.

8.6 Functions of the TOUCHbasic-inlay keypad

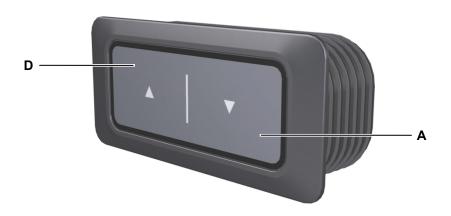


Figure 59 TOUCHbasic-inlay control keypad

A Key for adjusting downwards

D Key for adjusting upwards

8.6.1 Key assignments for the TOUCHbasic-inlay keypad

Button	Function
	Adjusting upwards
	Adjusting downwards
	For carrying out the reset motion after a malfunction (refer to 6.1).

▶ Press the key on the control keypad to raise or lower the table. Keep pressing the key until the desired height of the table is reached.

8.7 Functions of the TOUCHbasic-down keypad



Figure 60 TOUCHbasic-down control keypad

A Key for adjusting downwards

D Key for adjusting upwards

8.7.1 Key assignments for the TOUCHbasic-down keypad

Button	Function
	Adjusting upwards
	Adjusting downwards
	For carrying out the reset motion after a malfunction (refer to 6.1).

▶ Press the key on the control keypad to raise or lower the table. Keep pressing the key until the desired height of the table is reached.

8.8 Functions of the TOUCHfx keypad

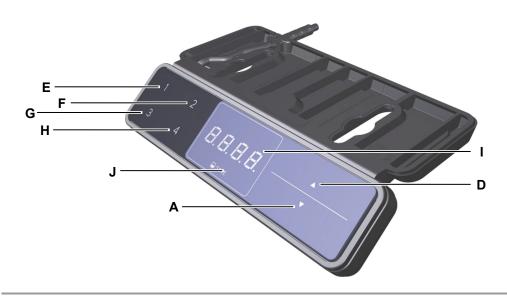


Figure 61 TOUCHfx control keypad

- A Key for adjusting downwards
- E Memory key 1
- **G** Memory key 3
- I Display

- **D** Key for adjusting upwards
- F Memory key 2
- H Memory key 4
- J Memory key

8.8.1 Key assignments for the TOUCHfx keypad

Key / indicator	Function	Key / indicator	Function
1	Memory key 1	☐ SAVE	Memory key
2	Memory key 2	A	Adjusting upwards
3	Memory key 3	•	Adjusting downwards
4	Memory key 4		

- ▶ The display on the TOUCHfx control keypad is a 4-character positional and information display.
- ▶ Using the keys for upwards or downwards adjustments: Press and hold the corresponding key until the desired position is reached.

8.8.2 Advanced functions

Saving a position

Any table position can be saved using this function.

- ▶ When the control unit is turned on for the first time, all positions are equal to the smallest table position (the lower end position).
- ▶ Only one table position can be stored per memory key.

To save a position, proceed as follows:

3 Move the table to the position that you want to save. The position is shown on the display (e.g. 125 cm).





4 Press the Save key.



S - is now shown on the display.



5 Press the desired memory key (e.g. 2).



S 2 is shown on the display.



6 The set table position is now saved for the selected memory key. A double-click noise can then be heard. After about 2 seconds, the saved table position is displayed.

Adjusting the table to a saved height position

This function allows you to set the table to a saved table position.



7 Press and hold the memory key that corresponds to the desired table position (e.g. position 2).

The table will move as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

8 Release the key when the table has reached the saved position.



The current (saved) position is shown on the display.

8.9 Functions of the TOUCHdown keypad

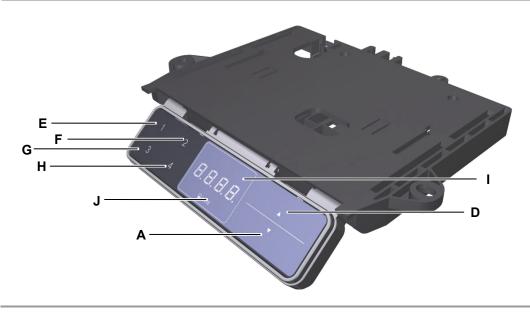


Figure 62 TOUCHdown control keypad

- A Key for adjusting downwards
- E Memory key 1
- **G** Memory key 3
- I Display

- **D** Key for adjusting upwards
- F Memory key 2
- H Memory key 4
- J Memory key

8.9.1 Key assignments for the TOUCHdown keypad

Key / indicator	Function	Key / indicator	Function
1	Memory key 1	☐ SAVE	Memory key
2	Memory key 2	A	Adjusting upwards
3	Memory key 3	•	Adjusting downwards
4	Memory key 4		

- ► The display on the TOUCHdown control keypad is a four-character positional and information display.
- ▶ Using the keys for upwards or downwards adjustments: Press and hold the corresponding key until the desired position is reached.

8.9.2 Advanced functions

Saving a position

Any table position can be saved using this function.

 
- ▶ When the control unit is turned on for the first time, all positions are equal to the smallest table position (the lower end position).
- ▶ Only one table position can be stored per memory key.

To save a position, proceed as follows:

9 Move the table to the position that you want to save. The position is shown on the display (e.g. 125 cm).



SAVE





S – is now shown on the display.



11 Press the desired memory key (e.g. 2).



S 2 is shown on the display.



12 The set table position is now saved for the selected memory key. A double-click noise can then be heard. After about 2 seconds, the saved table position is displayed.

Adjusting the table to a saved height position

This function allows you to set the table to a saved table position.



13 Press and hold the memory key that corresponds to the desired table position (e.g. position 2).

The table will move as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

14 Release the key when the table has reached the saved position.



The current (saved) position is shown on the display.

Activating and deactivating the display lock

Swipe across the display to activate or deactivate the display lock. A key icon is shown on the display when it the key functions are locked.

- ▶ Requirement: The display must be activated (e.g. showing the current height). To activate the display, simply press a key (e.g. the UP key) briefly.
- **15** Swipe the display in the vicinity of the keys. Make sure that the display is swiped only slightly. Do not press any of the keys!
- **16** The display lock can be activated and deactivated by swiping.

8.10 Functionality of the TOUCHinlay keypad

The TOUCHinlay control keypad has two keys for the up/down adjustment movements, two memory keys, a save key and a display.



Figure 63 TOUCHinlay control keypad

- A Key for adjusting downwards
- E Memory key 1
- I Display

- **D** Key for adjusting upwards
- F Memory key 2
- J Memory key

8.10.1 Key assignments for the TOUCHinlay keypad

Key / indicator	Function	Key / indicator	Function
1	Memory key 1	☐ SAVE	Memory key
2	Memory key 2	A	Adjusting upwards
		▼	Adjusting downwards

- ► The display on the TOUCHinlay control keypad is a four-character positional and information display.
- ▶ Using the keys for upwards or downwards adjustments: Press and hold the corresponding key until the desired position is reached.

8.10.2 Advanced functions

Saving a position

Any table position can be saved using this function.

- ▶ When the control unit is turned on for the first time, all positions are equal to the smallest table position (the lower end position).
- ▶ Only one table position can be stored per memory key.

To save a position, proceed as follows:

17 Move the table to the position that you want to save. The position is shown on the display (e.g. 125 cm).





18 Press the Save key.



S – is now shown on the display.



19 Press the desired memory key (e.g. 2).



S 2 is shown on the display.



20 The set table position is now saved for the selected memory key. A double-click noise can then be heard. After about 2 seconds, the saved table position is displayed.

Adjusting the table to a saved height position

This function allows you to set the table to a saved table position.



21 Press and hold the memory key that corresponds to the desired table position (e.g. position 2).

The table will move as long as the memory key is pressed. If you release this key before the saved position is reached, the table will stop before it reaches this position.

22 Release the key when the table has reached the saved position.



The current (saved) position is shown on the display.

DD11S / DD21S Troubleshooting

9. Troubleshooting

This chapter describes troubleshooting methods for fixing problems. If you experience an error that is not listed in this table, please contact your supplier or sales agent.



CAUTION

Only qualified specialists who have received electrician training should carry out troubleshooting and repairs.

9.1 Malfunctions

Problem	Possible cause	Solution
The drives are not functioning.	There is no mains supply voltage.	Connect the mains power supply.
	The drives are not connected.	Connect the motor's connecting cable to the control unit.
	A plug has a bad contact.	Make sure that the motor cable, the power supply and the control keypad are properly and firmly connected.
	A control unit or a control keypad is defective.	Please contact your supplier or sales agent.
The drives are running in only one direction.	There was a power outage during an adjustment movement or the power cable was disconnected during a movement.	Carry out the reset movement.
	The control unit, drive, or control keypad is defective.	Please contact your supplier or sales agent.
The control unit or control keypad is not functioning properly.	There is no mains supply voltage.	Connect the mains power supply.
	The control keypad is not connected.	Connect the control keypad.
	The control unit, power cable or control keypad is defective.	Please contact your supplier or sales agent.
	A plug has a bad contact.	Make sure that the plugs are firmly seated and properly connected.

Troubleshooting DD11S / DD21S

9.2 Error messages on the control keypad's display

Displayed error message	Possible cause	Solution	
HOT	The SMART/COMPACT control unit is equipped with a thermal protective mechanism which has been triggered.	Wait until the control unit has cooled down and the message HOT is no longer displayed. The control unit is once again ready for operations.	
EDD	There is an internal error in the SMART/COMPACT control unit.	Proceed according to the instructions in the error list below.	
00	Internal error channel 1	Switch off the control unit.	
01	Internal error channel 2	Please contact your supplier or sales agent.	
02	Internal error channel 3	a sales agent.	
12	Malfunction channel 1 (SMART/COMPACT)	Disconnect all connecting cables from the control unit.	
13	Malfunction channel 2 (SMART/COMPACT)	Find and correct the short circuit. Reconnect the control unit and re-	
14	Defect on channel 3 (COMPACT only)	 sume operations. Connect the correct lifting column to the correct socket. Reconnect the control unit and re- sume operations. 	
24	Excessive current at lifting column M1 (SMART/COMPACT)	Remove the jammed objects from the range of movement.	
25	Excessive current at lifting column M2 (SMART/COMPACT)	Table is overloaded: remove the excess load.	
26	Excessive current at lifting column M3 (COMPACT)	Please contact your supplier or sales agent.	
48	Excessive current at drive group 1 (SMART/COMPACT)	-	
49	Excessive current at drive group 2 (COMPACT)	-	
60	Collision protection	-	
62	Excessive current at control unit	-	
36	Plug detection at socket M1	Connect the correct lifting column to	
37	Plug detection at socket M2	the correct socket.Carry out the reset movement.	
38	Plug detection at socket M3	- Carry out the reset movement.	
61	Lifting columns are incorrect	-	

DD11S / DD21S Troubleshooting

Displayed error message	Possible cause	Solution
55	Synchronization of drive group 1	Remove the load from the table.
56	Synchronization of drive group 2	Carry out the reset movement.
		The error is still displayed after the reset: Please contact your supplier or sales agent.
67	The voltage is too high.	Disconnect the mains cable from the power supply.
		Please contact your supplier or sales agent.
70	Changed drive configuration	1. option:
		Disconnect the mains power cable from the power supply and wait at least five seconds.
		Connect the mains power cable to the power supply.
		Carry out the reset movement.
		2. option:
		Simultaneously press the Memory position 1 and 2 keys and the Tabletop up key. Hold the keys down for about ten seconds
		and then release them. S 1 is now shown on the display.
		Press down on the Tabletop up key until S 7 appears in the display.
		Press the Memory key.
		3. option:
		Please contact your supplier or sales agent.

88721 2.0

Troubleshooting DD11S / DD21S

Displayed error message	Possible cause	Solution
71	Change the anti-pinch configuration	Refer to error 70 .
		Disable the sensor unit:
		Remove a sensor unit from the COMPACT control unit. The error E71 appears on the display.
		Verify that the sensor unit is no longer connected to the COMPACT control unit.
		Press down on the Tabletop up key until the tabletop has reached its upper position. The COMPACT control unit clicks three times: the sensor unit is now deactivated.
81	Internal error	Carry out the reset movement.
		Disconnect the mains cable from the power supply. Reconnect the power supply cable after a few seconds.
		If this error is displayed multiple times:
		Disconnect the mains cable from the power supply. Please contact your supplier or sales agent.

▶ A manual reset may be required if there was a power outage (or if the power cord was disconnected) during the height adjustment process.

DD11S / DD21S Troubleshooting

9.3 Error messages, as indicated by clicking tones from the control unit

Number of clicks	Explanation	Solution
Two	Normal operations (The system is working properly.)	-
One	Emergency mode (The lifting columns cannot be used in emergency mode.)	Check the LEDs and the error code on the display of the control keypad.
3 – 6	The last shutdown was incomplete.	Check the LEDs and the error code on the display of the control keypad.
	Forced reset movement	-

9.4 Error messages displayed by the LEDs (COMPACT control unit)

LED display	Explanation	Solution
Control unit LED is	Internal error	Carry out the reset movement.
flashing		Disconnect the mains cable from the power supply. Reconnect the power supply cable after a few seconds.
		Disconnect the mains cable from the power supply. Please contact your supplier or sales agent.
Control unit LED is	A reset movement is required.	Carry out the reset movement.
illuminated.		Note: This LED is also illuminated during the reset movement or after the reset was not executed to completion. It goes off when the reset is finished.
The LED over the lifting column port is	There is a short circuit on the lifting column.	Disconnect the control unit's connecting cable.
flashing.		Find and correct the short circuit.
		Reconnect the control unit and resume operations.
The LED over the lifting column port is lit.	A lifting column is missing.	Connect the correct lifting column to the correct socket.
		Carry out the reset movement.

10. Maintenance and cleaning

➤ You should only use spare parts which have been manufactured or approved by DewertOkin. Only these parts will guarantee a sufficient level of safety.

10.1 Maintenance

- ▶ Periodic inspections should be carried out in accordance with the German Social Accident Insurance (DGUV) guidelines / provision 3. A qualified electrician should carry out this inspection.
- ▶ The following should also be checked frequently:

Type of check	Explanation	Time interval
Look over the housing periodically for any signs of damage.	Check the housing for breaks or cracks. The IP-class protection will be impaired by any breakage or cracks.	At least every six months.
Look over the cables, wires and strain relief mechanisms.	Check the cables for pinching or shearing. Also check the strain relief and kink protection mecha- nisms, in particular after any me- chanical load.	At least every six months.
Check the resistance of the protective earth and check for leakage current.	The leakage current and the protective earth resistance should be checked by a trained electrician.	At least every six months.
Check the function and safety of the electrical system.	A qualified electrician should carry out this inspection. (Refer to the "Electrical connection" section in the "Installation" Chapter.)	Periodic inspections can be carried out at intervals based on the risk assessment which you conduct for your end product.

10.2 Cleaning

▶ Clean the DD11S/DD21S system components using a dry cloth as often as needed.

NOTICE

- Always disconnect the mains power plug from the DD11S/DD21S system before you start to clean it.
- Be sure that you do not damage the connecting cables during the cleaning.

11. Technical specifications and product designation

11.1 **Table**

Dimensions	
DESKFRAME C DDS-A 30x30 / DESI	(FRAME C DDS-A 40x40 (non-adjustable version)
Tabletop (permissible dimensions) for	table with two lifting columns:
Length	1200 to 2000 mm
Width	800 to 1000 mm
Height	19 to 25 mm
Load	Max. 100 kg
DESKFRAME C DDS-B 30x30 / DESP	KFRAME C DDS-B 40x40 (adjustable version)
Tabletop (permissible dimensions) for	table with two lifting columns:
Length	1200 to 2000 mm
Width	800 to 1000 mm
Height	19 to 25 mm
Load	Max. 100 kg
DESKFRAME C DDS-(A/B) ¹⁾ 30x30 +	DESKFRAME C DDS-(A/B) ¹⁾ 30x30-3L
DESKFRAME C DDS-(A/B) ¹⁾ 40x40 +	DESKFRAME C DDS-(A/B) ¹⁾ 40x40-3L
Tabletop (permissible dimensions) for	table with three lifting columns:
Length	1200 to 2000 mm / 1600 to 2000 mm
Width	800 to 1000 mm
Height	19 to 25 mm
Load	Max. 120 kg
Table frame	
Length x width x height	Depending on your model
Table legs	
Length x width x height	Depending on your model
Ambient conditions for operation, s	torage and transport
Temperatures for transport and stor-	From -20 °C to +50 °C
age	From -4 °F to +122 °F
Operating temperature	From +10 °C to +40 °C
	From +50 °F to +104 °F
Relative humidity	From 30% to 75%
Air pressure	From 800 hPa to 1060 hPa
Height	< 2000 m

 $^{^{1)}}A = fixed$

²⁾B = adjustable

11.2 SMART and COMPACT control units

11.2.1 SMARTeco / SMARTneo / SMARTneo-pro control unit

Control unit:	SMARTeco	SMARTneo	SMARTneo-pro
Rated voltage /	USA: 120V AC / 60Hz / 5 A EU: 230V AC / 50Hz / 2.5 A		
Frequency / Rated current consumption			
Standby power at rated voltage		≤ 0.3 W	
Rated secondary power (sum of all motor channels)	216 VA	240	VA
Mode of operations ¹	Intermit	tent duty 2 minutes /18 r	minutes
Protection class	I	I	I
Protection degree		IP20	
Dimensions and weight			
Length x width x height (in mm)	186 x 100 x 30	218 x 84	.5 x 36.5
Weight	305 g	317 g	320 g
Ambient conditions for ope	ration, storage and trai	nsport	
Temperatures for transport	F	From -20 °C to +50 °C	
and storage	From -4 °F to +122 °F		
Operating temperature	From +10 °C to +40 °C		
	From +50 °F to +104 °F		
Relative humidity	From 30% to 75%		
Air pressure	From 800 hPa to 1060 hPa		
Height	< 2000 m		

Mode of operation: intermittent duty 2 minutes/18 minutes. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes. The system can malfunction if this pause is not observed!

11.2.2 COMPACTeco / COMPACTeco+ control unit

Control unit:	COMPACTeco	COMPACTeco+
Rated voltage / Frequency /	USA: 120V A	AC / 60 Hz / 10 A
Rated current consumption	EU: 230V /	AC / 50Hz / 5 A
Standby power at rated voltage	≤ 0.3 W	≤ 0.1 W
Rated secondary power (sum of all motor channels)	360	O VA
Mode of operations ¹	Intermittent duty 2	2 minutes /18 minutes
Protection class		I
Protection degree	IP	20
Dimensions and weight		
Length x width x height (in mm)	264 x	103 x 37
Weight	Ę	523 g
Ambient conditions for oper port	ation, storage and trans-	
Temperatures for transport	From -20 °	°C to +50 °C
and storage	From -4 °I	= to +122 °F
Operating temperature	From +10	°C to +40 °C
	From +50 °	°F to +104 °F
Relative humidity	From 30	0% to 75%
Air pressure	From 800 hF	Pa to 1060 hPa
Height	< 20	000 m

Mode of operation: intermittent duty 2 minutes/18 minutes. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes. The system can malfunction if this pause is not observed!

88721 2.0

11.3 Dimensions of the SMARTeco control unit

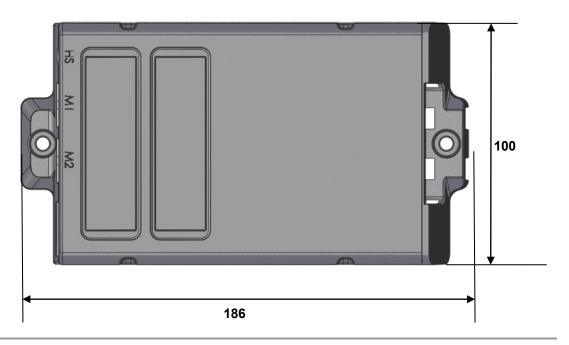


Figure 64 SMARTeco control unit, top view (in mm)



Figure 65 SMARTeco control unit, side view (in mm)

11.4 Dimensions of the SMARTneo / SMARTneo-pro control unit

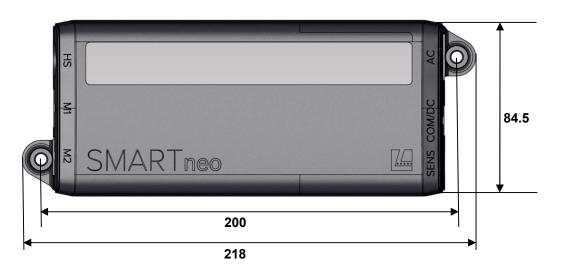


Figure 66 SMARTneo / SMARTneo-pro control unit, top view (in mm)



Figure 67 SMARTneo-pro control unit, side view (in mm)

11.5 Size of COMPACT control unit

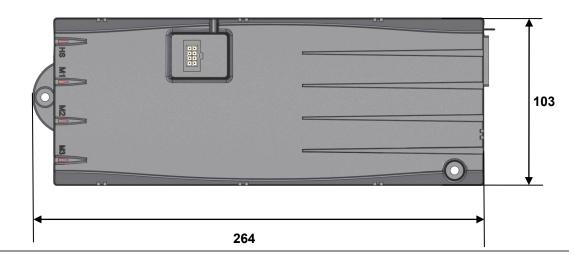


Figure 68 SMART control unit, top view (in mm)

 


Figure 69 COMPACT control unit, side view (in mm)

11.6 DD11S lifting column

Input voltage	24 V DC – 29 V DC	
Current consumption at rated load	Max. 5.5 A DC	
Permitted push force	Max. 700 N	
Self-locking	700 N	
Mode of operation ¹ at max. rated load	Intermittent duty 2 min./18 min.	
Protection class	III	
Noise level	≤ 55 dB(A)	
Drive type	lifting column	
Protection degree	IP20	
Colours	RAL 9005, RAL 9006, RAL 9016	
Lift of the DD11S	500 mm	
Length ² x width x height	645 mm x 108.6 mm x 155 mm	
Length ³ x width x height	1145 mm x 108.6 mm x 155 mm	
Size of columns	Exterior: 80 mm x 62 mm	
	Interior: 73 mm x 55 mm	
Weight	Approx. 7.9 kg	
Cable length	1270 ±10 mm	
Ambient conditions for operation, storage and transport		
Transport / storage temperature	From -20 °C to +50 °C From -4 °F to +122 °F	
On a self-real real real real real real real real		
Operating temperature	From +10 °C to +40 °C From +50 °F to +104 °F	
Relative humidity	From 30% to 75%	
Air pressure	From 800 hPa to 1060 hPa	
Height	< 2000 m	

Mode of operation: intermittent duty 2 minutes/18 minutes. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes. The system can malfunction if this pause is not observed!

88721 2.0

²⁾ Length when retracted.

³⁾ Length when fully extended.

11.7 Dimensions of the DD11S lifting column

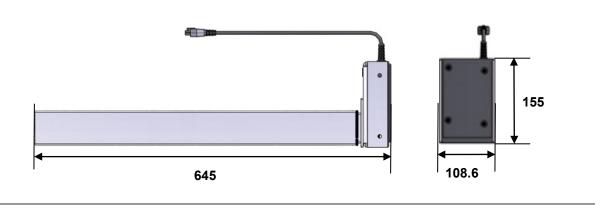


Figure 70 DD11S lifting column (in mm)

11.8 DD21S lifting column

Input voltage	24 V DC – 29 V DC	
Current consumption at rated load	Max. 5.5 A DC	
Permitted push force	Max. 700 N	
Bending torque, dynamic	<150 Nm (in the y direction, see Figure 72)	
Torsional moment (static twisting torque)	< 200 Nm	
Self-locking	700 N	
Mode of operation ¹ at max. rated load	Intermittent duty 2 min./18 min.	
Protection class	III	
Noise level	≤ 55 dB(A)	
Drive type	lifting column	
Protection degree	IP20	
Colours	RAL 9005, RAL 9006, RAL 9016	
Stroke of the DD21S	650 mm	
Length ² x width x height	565 mm x 108.6 mm x 155 mm	
Length ³ x width x height	1215 mm x 108.6 mm x 155 mm	
Size of columns	Exterior: 80 mm x 62 mm	
	Middle: 73 mm x 55 mm	
	Interior: 66 mm x 48 mm	
Weight	Approx. 9.1 kg	
Cable length	1200 ±10 mm	
Ambient conditions for operation, storage and transport		
Transport / storage temperature	From -20 °C to +50 °C From -4 °F to +122 °F	
Operating temperature	From +10 °C to +40 °C	
	From +50 °F to +104 °F	
Relative humidity	From 30% to 75%	
Air pressure	From 800 hPa to 1060 hPa	
Height	< 2000 m	

Mode of operation: intermittent duty 2 minutes/18 minutes. This means that after the unit is operated with its rated load for up to two minutes it must then be paused for 18 minutes. The system can malfunction if this pause is not observed!

²⁾ Length when retracted.

³⁾ Length when fully extended.

11.9 Dimensions of DD21S lifting column

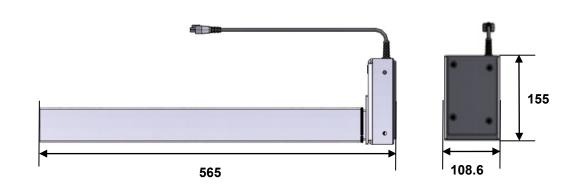


Figure 71 DD21S lifting column (in mm)

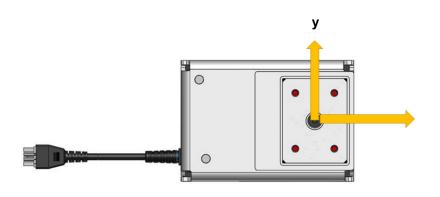


Figure 72 View of the DD21S lifting column from below (foot end)

11.10 Product labelling

▶ The ratings plate shown is an example; the values shown in this example may differ from the specifications for your configuration.

11.10.1 Ratings plate on the control unit

A ratings plate (or type label) on each control unit specifies the exact name and serial number of the device. It also states the technical specifications valid for that particular control unit. The following illustration shows where the specifications are located on the ratings plate of the control unit.

Ratings plate on the COMPACT control unit

LOGICDATA

Wirtschaftspark 18 A-8530 Deutschlandsberg

Made in Country

↑ (€ 🙈

Type: COMPACT-e-3-OK-E-EU

Revision: xxx/xx.xx

77617



Figure 73	Ratings plate example	
COMPACT-e-3	-OK-E-EU	Model name
Revision: xxx/x	x.xx	Software version
Input: 220-240\	//50-60Hz/5A	Input voltage, frequency and current consumption
Output: 360 VA	√ 24 V ===	Power and output voltage
Duty cycle: 2 m	in on / 18 min off	Intermittent operations: 2 minutes / 18 minutes
Ser. No.		Serial number
		Use in dry rooms only!
CE		Conformity mark
77617		Article number

Ratings plate for the SMARTneo control unit

LOGICDATA

Wirtschaftspark 18 A-8530 Deutschlandsberg Made in Hungary

17 € □

Type: SMARTneo-2-OK-E-EU Revision: xxx/xx.xx

220-240V/50-60Hz/2.5A

Output: 240VA/30V === Duty cycle: 2min on /18min off

1min on /9min off
Ser. No.: xxxxxxxxxxxxxxxxx

Works with LOGIClink

Input:



Figure 74	Ratings plate	example
-----------	---------------	---------

SMARTneo-2-OK-E-EU	Model name
Revision: xxx/xx.xx	Software version
Input: 220-240V/50-60Hz/2.5A	Input voltage, frequency and current consumption
Output: 240VA/30 V ===	Power and output voltage
Duty cycle: 2 minutes on / 18 minutes off 1 minute on / 9 minutes off	Intermittent operations: 2 minutes / 18 minutes 1 minute / 9 minutes
Ser. No.	Serial number
	Use in dry rooms only!
CE	Conformity mark
	Protection class: II
	Read the manual!

Ratings plate for the SMARTeco control unit

LOGICDATA

Wirtschaftspark 18 A-8530 Deutschlandsberg Made in Country

Revision: xxx/xx.xx

SMART-e-2-OK-G-EU

Ser. No.: 82334

Type:





Figure 75 Ratings plate example	
SMARTeco-e-2-OK-G-EU	Model name
Revision: xxx/xx.xx	Software version
Input: 220-230V/50-60Hz/2.5A	Input voltage, frequency and current consumption
Output: 216 VA / 24 V ===	Power and output voltage
Duty cycle: 2 min on / 18 min off	Intermittent operations: 2 minutes / 18 minutes
Ser. No.	Serial number
	Use in dry rooms only!
CE	Conformity mark
82334	Article number

88721 2.0

SMARTeco, SMARTneo, SMARTneo-pro and COMPACT control unit stickers



DewertOkin GmbH, Weststrasse 1, 32278 Kirchlengern, DE

Figure 76 Sticker (an example)

XXXXX	Article number
CONTROL UNIT yyyyy	Type designation and ID of control unit
SW zzzzz	ID of software
7	Follow all special disposal instructions!

100 88721 2.0

11.10.2 Ratings plate on the Motion Assist control keypad



Figure 77 Ratings plate example

M. Assist Type designation for the Motion Assist

xxxxxxx Article number

Prod.date 28/10 Calendar week / year

11.10.3 Ratings plates for the control keypads

 


Figure 78 Rating plates (examples)

Position	Designation (example)	Explanation
Α	HSCO-OD-2	Type designation (abbreviation)
В	RevX	Revision
С	xxxxxxxxxx	Serial number
	CF	Conformity mark

11.10.4 Ratings plate for the D11S / DD21S lifting columns

A ratings plate (type label) on each lifting column specifies the exact name and serial number of the lifting column. It also states the technical specifications valid for that particular lifting column. The following illustrations show where the specifications are located on the ratings plate.

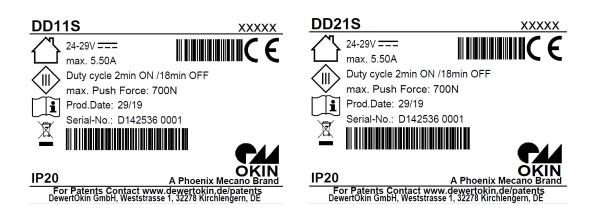


Figure 79 Ratings plate (examples)

DD11S / DD21S	Model name
xxxxx	Article number
24V – 29V 	Input voltage
Max. 5.50A	Current consumption
Duty cycle: 2 min ON /18 min OFF	Intermittent operations: 2 minutes / 18 minutes
max. Push Force	Push force
Prod.date	Production date: Calendar week / year
Serial No.	Serial number for your drive
IP20	Protection degree
凸	Use in dry rooms only!
	Protection class: III
CE	Conformity mark
i	Follow the special assembly instructions!
	Follow all special disposal instructions!

11.10.5 Ratings plate on the table frame



Figure 80	Ratings plate example			
DESKFRAME C DDS-A 30x30		Model name		
DESKFRAME C DDS-A 40x40				
DESKFRAME C DDS-B 30x30				
DESKFRAME C DDS-B 40x40				
XXXXX		Article number		
Max. 100kg		Maximum load		
max. 120 kg (only 3L)		Maximum load when using three table legs		
Prod.date		Production date: Calendar week / year		
Serial No.		Serial number		
		Use in dry rooms only!		
		Follow the special assembly instructions!		
		Follow all special disposal instructions!		

DD11S / DD21S

12. Disposal

12.1 Packaging material

The packaging material should be sorted into recyclable components and then disposed of in accordance with the appropriate national environmental regulations (in Germany according to the recycling law KrWG from 01.06.2012; internationally according to the EU Directive 2008/98/EC (Waste Framework Directive WFD as of 12.12.2008)).

12.2 Drive components

The DD11S/DD21S system consists of electronic components, cables and metal and plastic parts. You should observe all corresponding national and regional environmental regulations when disposing of the system.

The disposal of the product is regulated in Germany by Elektro-G, internationally by the EU Directive 2012/19/EC (WEEE), or by any applicable national laws and regulations.



The DD11S/DD21S system components should not be disposed of with normal household waste!

Declaration of Incorporation/Installation

According to Appendix II of the EU Machinery Directive 2006/42/EC

The manufacturer: DewertOkin GmbH Weststraße 1 32278 Kirchlengern Germany

declares that the incomplete machines described below

DD11S System DD21S System

complies with the following basic requirements of the Machinery Directive (2006/42/EC):

Sections: 1.1.3; 1.3.3; 1.3.4; 1.3.7; 1.5.1; 1.5.2; 1.5.5; 1.5.6; 1.5.7; 1.5.8; 1.5.9; 1.5.10; 1.5.13

According to

- DIN EN 527-1:2011
- DIN EN 527-2:2017

You may only operate this incomplete machine after you have confirmed that the end product (into which this machine will be installed) complies with the Machinery Directive 2006/42/EC.

On request, the manufacturer is obliged to send the special documentation accompanying the partially completed machinery in electronic form to the appropriate national institution. The special technical documents corresponding to the machine have been created according to Appendix VII, part B.

The following person is responsible for the technical documentation:

DewertOkin GmbH Weststraße 1 32278 Kirchlengern Tel.: 05223 979-0 Deutschland - Germany

Kirchlengern, Germany. November 27, 2019

Dr.-Ing. Josef G. Groß Managing Director

EU Declaration of Conformity

In compliance with Appendix IV of the EMC Directive 2014/30/EU In compliance with Appendix IV of the LVD Directive 2014/35/EU In compliance with Appendix VI of the EU RoHS Directive 2011/65/EU (incl. Commission delegated Directive (EU) 2015/863)

The manufacturer:

DewertOkin GmbH

Weststraße 1

32278 Kirchlengern

Germany

declares that the following products

DD11S System with DewertOkin Drive System¹⁾²
DD21S System with DewertOkin Drive System¹⁾³⁾

meets the requirements of the following EU directives:

Electromagnetic Compatibility Directive 2014/30/EU

Low Voltage Directive 2014/35/EU

COMMISSION DELEGATED DIRECTIVE (EU) 2015/863 of 31 March 2015 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances.

Applied standards:

- EN 60335-1:2012/A11:2014
- EN 55014-1:2006/A1:2009/A2:2011
- EN 55014-2:1997/A1:2001/A2:2008
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- EN 62233:2008

This declaration of conformity is no longer valid if constructional changes are made which significantly change this drive (i.e., which influence the technical specifications found in the instructions or the intended use)!

Kirchlengern, Germany. November 27, 2019

Dr.-Ing. Josef G. Groß Managing Director

1) DESKFRAME C ID-A 30x30, DESKFRAME C ID-A 30x30-3L, DESKFRAME C ID-A 40x40, DESKFRAME C ID-A 40x40-3L

with Control Unit: SMARTeco, COMPACTeco, oder COMPACTeco+, SMARTneo oder SMARTneo-pro

with Operating Elements: HSCO (1.32.000.087.30), HSU (1.32.000.32.30 oder 1.32.000.63.20), HSF (1.32.000.096.30),

Motion Assist, TOUCHfx, TOUCHbasic-inlay, TOUCHbasic-down, TOUCHdown oder

TOUCHinlay

with Lifting Column: DD11S
 with Lifting Column: DD21S



DewertOkin GmbH Weststrasse 1 Kirchlengern 32278, Germany

Tel: +49 (0)5223/979-0 Fax.: +49 (0)5223/75182 http://www.dewertokin.de Info@dewertokin.de

ID No.: 88721